



VoIP Phone **HD**
CooFone-D30

Quick Installation Guide



Smart VoIP
www.zycoo.com

Table of Contents

1 Instruction	02
2 The Appearance of Product	03
3 Connecting IP Phone	04
4 IP Phone Setup Menu	05
4.1 Network mode Settings diagram	05
4.2 The menu of phone Structure	06
5 Configuration	07
5.1 Web Login	07
5.2 Network-PPPoE Setting	08
5.3 Network-Static Setting.....	08
5.4 Network-DHCP Setting	09
5.5 SIP Settings	09
6 Make a Phone Call	10
6.1 IP Address	10
6.2 SIP Number	10

1 Instruction

This phone can be setted through the LCD or web page.
 If you own this product to make some VoIP calls,an Ethernet-based Cable or a DSL modem with an active connection to the Internet are necessary.


Check Your Package Contents

These are the items included with your D30 IP Phone purchase:

 VoIP Phone D30	 Handset
 Power adaptor	 Handset cord
 Quick Installation Guide	 Ethernet Cable

2 The Appearance of Product

Front view and keypad function:

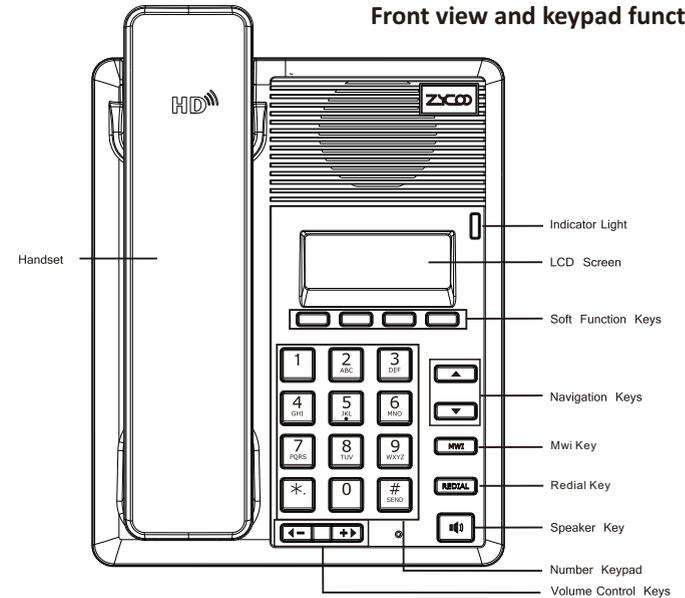


You can press these number keys one or more times to complete the corresponding input when you want do some input on the LCD.

Key	Text Mode		Key	Text Mode	
	Normal(ABC)	Numeric(0-9)		Normal(ABC)	Numeric(0-9)
		1		PQRSpqrs	7
	ABCabc	2		TUVtuv	8
	DEFdef	3		WXYZwxyz	9
	GHIghi	4			0
	JKLjkl	5		#@.,/\$%& ()<>[]~!_ =+ - ?	*
	MNOmno	6			#


3 Connecting IP Phone

Connect the IP Phone as shown by the following diagram:

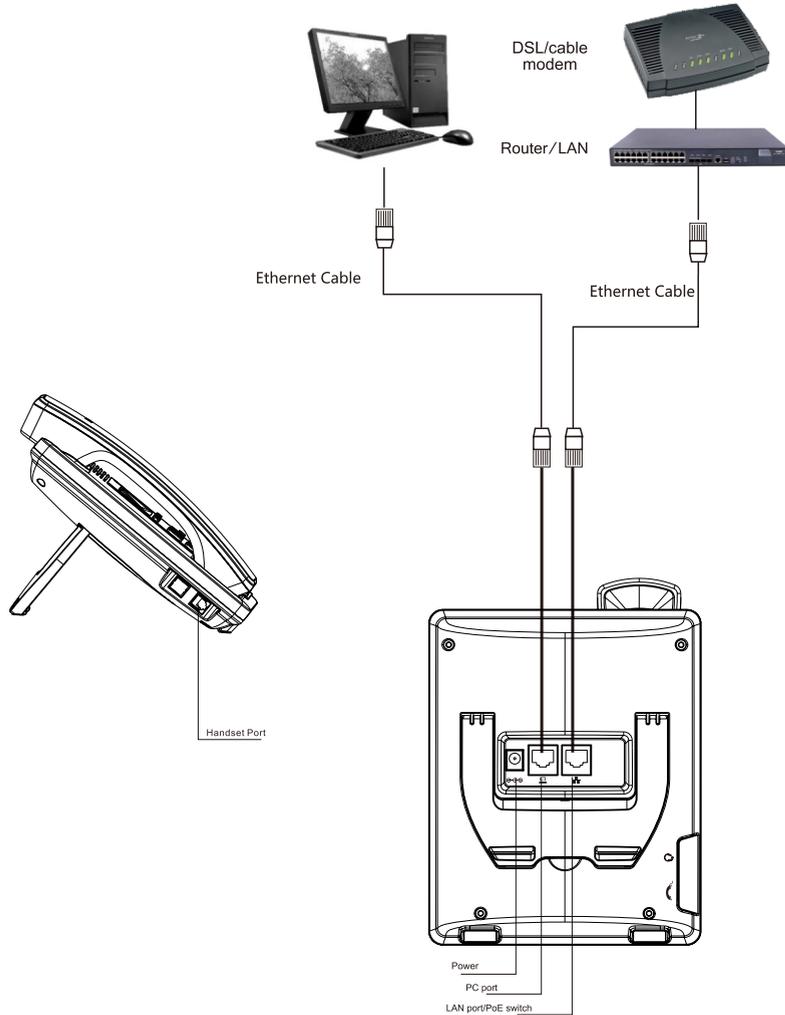


4 IP Phone Setup Menu

4.1 Network mode Settings diagram:

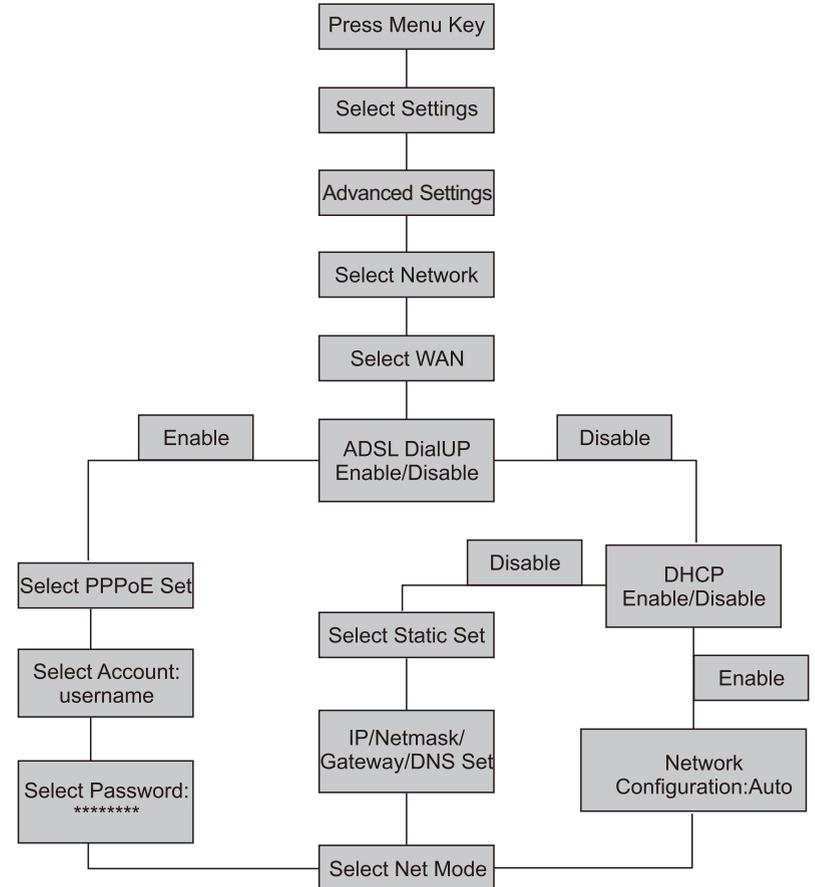


4.2 The menu of phone Structure:

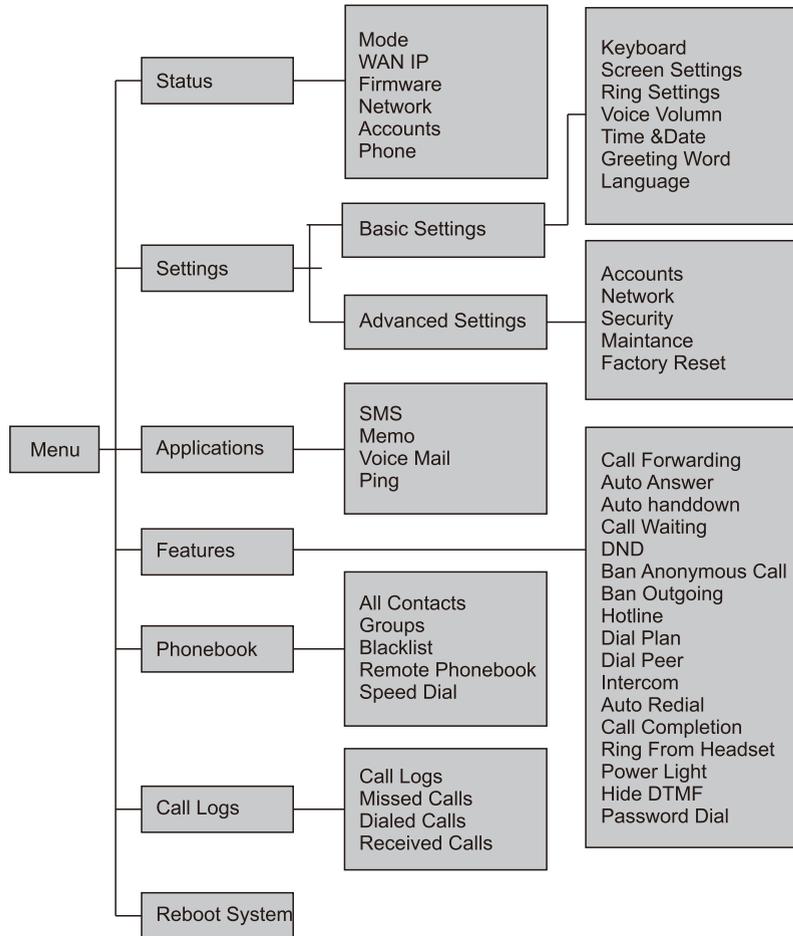

5 Configuration

5.1 Web Login

 The configuration menu of D30/D30P can be accessed using the convenient and user-friendly interface of a web browser.



Open the browser and type into the IP address which can be found in the status of the LCD menu(e.g.http://192.168.1.16)to visit the Web page and make some configuration.



Enter the username and password,and both of the default username and password are“admin”. After your logon,the Web page will be displayed as follows.

WAN		LAN	
Connection Mode	Static IP	IP Address	192.168.10.1
MAC Address	00:a8:59:cd:51:b0	DHCP Service	Enabled
IP Address	192.168.1.209	Bridge Mode	Enabled
IP Gateway	192.168.1.1		

Accounts		
SIP Line 1	809@192.168.1.251:5060	Registered
SIP Line 2	@:5060	Unapplied
IAX2	@:4569	Unapplied

5.2 Network-PPPoE Setting

Select Network from the main menu.

Select PPPoE as network connection type if your ISP uses PPPoE.(Most DSL users use PPPoE)

5.3 Network-Static Setting

Select Static as network connection type if all Wide Area Network IP is provided to you by your ISP.

5.4 Network-DHCP Setting

Select DHCP as network connection type if your access network supports DHCP.

5.5 SIP Settings

Select SIP settings from the main menu. The following fields such as Server Address, Server Port, Authentication User, Authentication Password and SIP User are required. Then check Enable Registration and click Apply to register your phone to the SIP server.

Server Address
Server Port
Authentication User
Authentication Password

SIP user
SIP server address
SIP server port number

Username for logging into the SIP server
Password for logging into the SIP server
SIP phone number

6 Make a Phone Call

6.1 IP Address:

- 1.Lift the handset or press the speaker button or headset button to enter the dialer interface.
- 2.Dial IP address.

For example:Input#192.168.0.1# in the dialer interface,you will call the device whose IP address is 192.168.0.1.

6.2 SIP Number:

Note:You have to register with SIP server to use SIP number.

- 1.Lift the handser or press the speaker button or headset button to enter the dialer interface.
- 2.Dial SIP number.

For example:Input 1866

- 3.Press""#""button or wait until the timer expires.