



Quick Installation Guide





Smart VolP www.zycoo.com

Table of Contents


1 Instruction	
2 The Appearance of Product	
3 Connecting IP Phone	
4 IP Phone Setup Menu	
4.1 Network mode Settings diagram	
4.2 The menu of phone Structure	
5 Configuration	
5.1 Web Login	
5.2 Network-PPPoE Setting	
5.3 Network-Static Setting	
5.4 Network-DHCP Setting	
5.5 SIP Settings	
6 Make a Phone Call	
6.1 IP Address	
6.2 SIP Number	

1 Instruction


This phone can be setted through the LCD or web page. If you own this product to make some VoIP calls, an Ethernet-based Cable or a DSL modem with an active connection to the Internet are necessary.

Check Your Package Contents

These are the items included with your D60 IP Phone purchase:

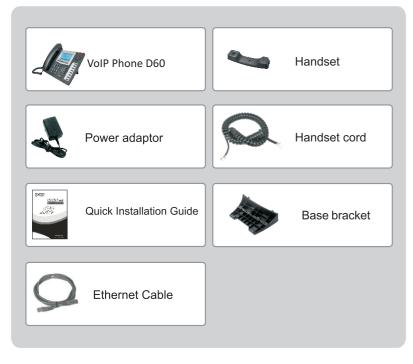

2 The Appearance of Product

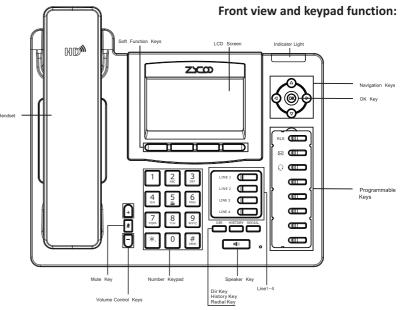


You can press these number keys one or more times to complete the corresponding input when you want do some input on the LCD.

	Text	Mode		Text	Mode			
Key	Normal(ABC)	Numeric(0-9)	Key	Normal(ABC)	Numeric(0-9)			
1		1	7 PQRS	PQRSpqrs	7			
2 ABC	ABCabc	2	8 TUV	TUVtuv	8			
3 DEF	DEFdef	3	9 _{WXYZ}	WXYZwxyz	9			
4 GHI	GHlghi	4	0		0			
5 <u>ж</u>	JKLjkl	5	*.	#@,.:/\$%& ()<>[]~!_=+-?	*			
6 MNO	MNOmno	6	# send		#			


3 Connecting IP Phone

Connect the IP Phone as shown by the following diagram:

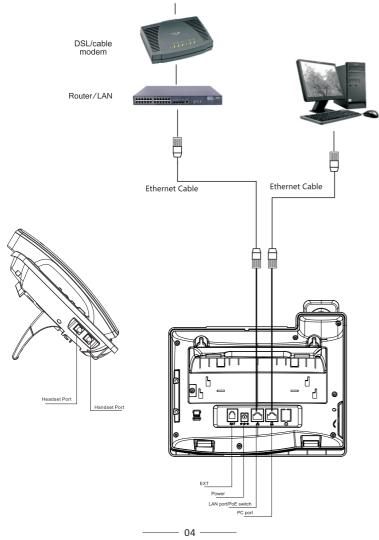


4 IP Phone Setup Menu

4.1 Network mode Settings diagram:

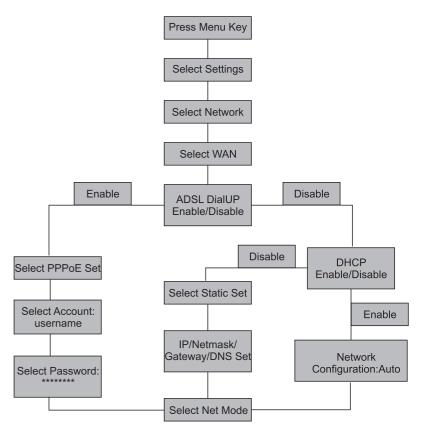

— 05 —

4.2 The menu of phone Structure:

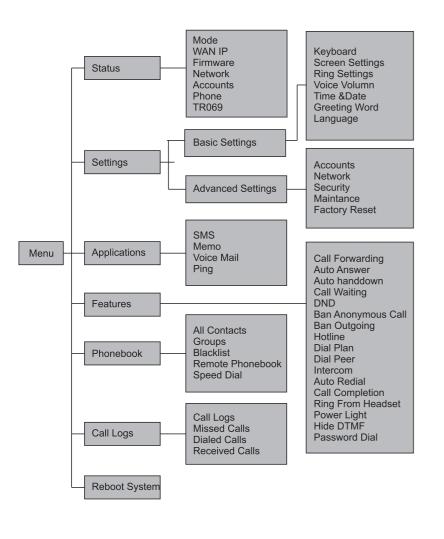

5 Configuration

5.1 Web Login

The configuration menu of D60 can be accessed using the convenient and userfriendly interface of a web browser.

VOIP	× +
♦ http://***.***.*.*/	

Open the browser and type into the IP address which can be found in the status of the LCD menu(e.g.http://192.168.1.16)to visit the Web page and make some configuration.

WE FOCUS, WE DELIVER	COOFONE-D60 IP PHONE
User:	admin
Password:	
Language:	English 💌
	Logon

Enter the username and password, and both of the default username and password are"admin". After your logon, the Web page will be displayed as follows.

	STATUS	WIZARD	CALL LOG	LANGUAGE
IC				
/ORK				
	Network			
E	WAN		LAN	
TION KEY	Connection Mode	Static IP	IP Address	192.168.10.1
TENANCE	MAC Address	00:a8:59:cc:b3:7c	DHCP Service	Enabled
RITY	IP Address	192.168.1.96	Bridge Mode	Enabled
UT	IP Gateway	192.168.1.1		
	Accounts			
	SIP Line 1	806@192.168.1.251:5060	Registered	
	SIP Line 2	@:5060	Unapplied	
	SIP Line 3	@:5060	Unapplied	
	SIP Line 4	@:5060	Unapplied	
	SIP Line 5	@:5060	Unapplied	

— 06 ——

5.2 Network-PPPoE Setting

Select Network from the main menu.

Select PPPoE as network connection type if your ISP uses PPPoE.(Most DSL users use PPPoE)

	WAN		QoS&VLAN			
ASIC			172,100,1,70			
NETWORK	Current Subr		255.255.255.0			
/OIP	Current IP G		192.168.1.1			
PHONE	MAC Address		00:a8:59:cc:b3:7c			
FUNCTION KEY	MAC Timesta	mp	20130426			
AINTENANCE	WAN Settings					
SECURITY	Obtain DNS S	erver Automatically	Enabled ⊻			
LOGOUT	Static IP 🔘		DHCP O		PPPoE 💿	
	Service Name	9	ANY			
	User		user123			
	Password		•••••			
				Apply		
	802.1X Settings					
	User		admin			
	Password					
	Enable 802.1					

5.3 Network-Static Setting

Select Static as network connection type if all Wide Area Network IP is provided to you by your ISP.

	WAN	LAN	QoS&VLAN		DHCP SERVICE	TIME&DATE
BASIC						
NETWORK						
VOIP						
PHONE	WAN Status					
FUNCTION KEY	Active IP Address		192.168.1.96			
	Current Subnet Mask		255.255.255.0			
MAINTENANCE	Current IP Gateway		192.168.1.1			
SECURITY	MAC Address		00:a8:59:cc:b3:7c			
LOGOUT	MAC Timestamp		20130426			
	WAN Settings					
	Static IP 💿		DHCP O		PPPoe O	
	IP Address		192.168.1.96			
	Subnet Mask		255.255.255.0	_		
	IP Gateway		192.168.1.1	_		
	DNS Domain			_		
	Primary DNS		202.96.134.133	_		
	Secondary D	NS	202.96.128.68			

5.4 Network-DHCP Setting

Select DHCP as network connection type if your access network supports DHCP.

WE FOCUS.WE DELIVER						
	WAN	LAN	QoS8VLAN	SERVICE PORT	DHCP SERVICE	TIME&DATE
	Current Subn		255.255.255.0			
WORK	Current IP Ga		192.168.1.1			
	MAC Address		00:a8:59:cc:b3:7c			
IE	MAC Timestamp		20130426			
TION KEY						
TENANCE	WAN Settings					
RITY	Obtain DNS S	erver Automatically	Enabled 💌			
UT	Enable Vendo	or Identifier	Disabled 💌			
	Vendor Ident	ifier	CooFone D60			
	Static IP 🔘		DHCP 💿		PPPoe O	
			C	Apply		
	802.1X Settings					
	User		admin			
	Password		••••			
	Enable 802.1	×	V			

5.5 SIP Settings

Select SIP settings from the main menu. The following fields such as Server Address, Server Port, Authentication User, Authentication Password and SIP User are required. Then check Enable Registration and click Apply to register your phone to the SIP server.

	SIP				
SIC					
rwork					
DIP	SIP Line SIP				
DNE	SIP Line SIP :	1 💌			
ICTION KEY	Basic Settings >>				
NTENANCE	Status	Registered	Do	main Realm	
URITY	Server Address	192.168.1.251	Pr	Proxy Server Address	
SOUT	Server Port	5060	Pr	oxy Server Port	
	Authentication User	806	Pr	oxy User	
	Authentication Passw	vord •••		oxy Password	
	SIP User	806		ckup Proxy Server Idress	
	Display Name	Ling	Ba	ckup Proxy Server Port	5060
	Enable Registration	V	Se	Server Name	
	Codecs Settings >>				
	Advanced SIP Settings >	>			
			Apply		
ver Address	SIP use	er	Usern	ame for logging	into the SIP se
ver Port	SIP ser	rver address	Passw	ord for logging i	nto the SIP se
thentication User	SIP ser	ver port numb		one number	
		.c. por namb	c. 51/ pli	one number	
thentication Passwo	ord				
	-	- 09 -			

6 Make a Phone Call

6.1 IP Address:

1.Lift the handset or press the speaker button or headset button to enter the dialer interface. 2.Dial IP address.

For example:Input#192.168.0.1# in the dialer interface, you will call the device whose IP address is 192.168.0.1.

6.2 SIP Number:

Note:You have to register with SIP server to use SIP number. 1.Lift the handser or press the speaker button or headset button to enter the dialer interface. 2.Dial SIP number. For example:Input 1866 3.Press"#"button or wait until the timer expires.