

Grandstream Networks, Inc.

GXV3240 IP Multimedia Phone for Android[™]

User Guide



This page intentionally left blank

GXV3240 USER GUIDE



GXV3240 User Guide

Index

DOCUMENT PURPOSE	13
GNU GPL INFORMATION	14
CHANGE LOG	15
FIRMWARE VERSION 1.0.3.75	15
FIRMWARE VERSION 1.0.3.62	
FIRMWARE VERSION 1.0.3.55	
FIRMWARE VERSION 1.0.3.46	15
FIRMWARE VERSION 1.0.3.37	15
FIRMWARE VERSION 1.0.3.30	15
FIRMWARE VERSION 1.0.3.22	
FIRMWARE VERSION 1.0.3.6	
FIRMWARE VERSION 1.0.1.54	
FIRMWARE VERSION 1.0.1.39	
FIRMWARE VERSION 1.0.1.29	
WELCOME	17
PRODUCT OVERVIEW	19
FEATURE HIGHLIGHTS	
GXV3240 TECHNICAL SPECIFICATIONS	
INSTALLATION	23
EQUIPMENT PACKAGING	23
CONNECT YOUR PHONE	23
GXV3240 EXTENSION MODULE (GXP2200EXT)	25
SAFETY COMPLIANCES	27
WARRANTY	27
GETTING TO KNOW GXV3240	29
USE THE TOUCHSCREEN	29
USE THE DESKTOP	
DESKTOP MENU	
ADD APPLICATION SHORTCUT TO DESKTOP	33



MANAGE DESKTOP ITEMS	
SET WALLPAPERS	
MANAGE RUNNING APPLICATIONS	
IDLE SCREEN	
SWITCH IDLE SCREENS	
SET UP IDLE SCREEN	
USE THE STATUS BAR	41
NOTIFICATIONS IN STATUS BAR	
SYSTEM SETTINGS IN STATUS BAR	
USE THE KEYPAD	
KEYPAD BUTTONS	
KEYPAD SHORTCUT FUNCTIONS	
USE THE ONSCREEN KEYBOARD	50
USE THE MESSAGE WAITING INDICATOR	51
MAKE PHONE CALLS	52
MARE PHONE CALLS	
REGISTER SIP ACCOUNTS	
ACCOUNT STATUS	
CONFIGURE SIP ACCOUNT	
SET PROGRAMMABLE KEYS ON UNREGISTERED ACCOUNT	
DIAL A NUMBER DIRECTLY	
REDIAL	
DIAL A NUMBER VIA CONTACT	
DIAL A NUMBER VIA CALL HISTORY	57
DIRECT IP CALL	
ANSWER A CALL	
SINGLE INCOMING CALL	
MULTIPLE CALLS/CALL WAITING	
CALL HOLD	
CALL RECORDING	
MUTE	65
TURN ON VIDEO DURING AUDIO CALL	
SWITCH AUDIO CHANNEL DURING CALL	67
CALL TRANSFER	
BLIND TRANSFER	
ATTENDED TRANSFER	
6-WAY CONFERENCE	73
INITIATE CONFERENCE	73
REMOVE PARTY FROM CONFERENCE	
END CONFERENCE	
HOLD AND RESUME CONFERENCE	



AUTO CONFERENCE MODE	
MISSED CALL	
DND (DO NOT DISTURB)	
VOICEMAIL/MESSAGE WAITING INDICATION	
CALL FORWARD	
MULTI-PURPOSE KEYS	
SHARED CALL APPEARANCE (SCA)	
CALL FEATURES	
CONTACTS	89
LOCAL CONTACTS	
ADD SINGLE CONTACTS	
IMPORT/EXPORT CONTACTS	
DOWNLOAD CONTACTS	
SEARCH CONTACTS	
USE CONTACTS	
MAKE A CALL TO CONTACTS	
SEND SMS MESSAGE TO CONTACTS	
SELECT CONTACTS	
ADD CONTACTS TO FAVORITES	
EDIT CONTACTS	
SEND CONTACTS TO DESKTOP SHORTCUT	
SHARE CONTACTS VIA BLUETOOTH	
ADD CONTACTS TO BLACKLIST	
ADD GROUP	
CONTACTS STORAGE STATUS	
ADD ACCOUNT TO SYNC UP CONTACTS	
LDAP BOOK	
BROADWORKS XSI CONTACTS	
BLACKLIST	103
BLOCK HISTORY	
RESTORE BLOCKED NUMBER	
DELETE BLOCK HISTORY	
EDIT BLACKLIST	
ADD BLACKLIST	
EDIT BLACKLIST	
DELETE BLACKLIST	
BLACKLIST SETTINGS	
CALL HISTORY	



LOCAL CALL HISTORY	
DIAL OUT FROM CALL HISTORY	
CALL HISTORY OPTIONS	
DELETE CALL HISTORY	
CALL HISTORY DETAILS	
BROADWORKS XSI CALL HISTORY	
SMS	113
VIEW SMS	
CREATE NEW SMS	
DELETE SMS	
CALENDAR	
SIGN IN CALENDAR	
VIEW CALENDAR	
CREATE EVENT	
CALENDAR OPTIONS	
EMAIL	
SIGN IN EMAIL	
EMAIL OPTIONS	
SEND EMAIL	
SEARCH EMAIL	
EMAIL FOLDERS	
MULTIPLE EMAIL ACCOUNTS	
GS MARKET	
VIEW APPS	
SEARCH APPS	
DOWNLOAD AND INSTALL APPS	
UPDATE APPS	
UNINSTALL APPS	
TOOLS	131
FILE MANAGER	
COPY AND PASTE FILES	
MOVE FILES	
SEND FILES	
DELETE FILES	
RENAME A FILE	
FTP SERVER	



RECORDER	
NORMAL RECORDER	
CALL RECORDER	
DOWNLOADS	
IP LOCATION	
DIAGNOSIS	
CAMERA	
TAKE PICTURE	
RECORD VIDEO	
CAMERA SETTINGS	
ANGLE ADJUSTMENT	
MULTIMEDIA	
GALLERY	
MUSIC	
PLAY MUSIC	
EDIT MUSIC	
SORT MUSIC	
SEARCH MUSIC	
CREATE PLAYLIST	
EDIT PLAYLIST	
BROWSER	
RSS NEWS	
ADD RSS WIDGET	
USE RSS WIDGET	
RSS WIDGET SETTINGS	
WEATHER	
ADD WEATHER WIDGET	
USE WEATHER WIDGET	
WEATHER SETTINGS	
BS-IM&P	
ACTIONURL	
PNP	
SET UP PNP APPLICATION	
ENABLE PNP FEATURE	
ENABLE FROM WEB PAGE	
ENABLE FROM LCD	



USE PNP FEATURE	
CONNECT TO NETWORK AND DEVICES	169
ETHERNET	
WI-FI	
TURN ON/OFF WI-FI	
ADD WI-FI NETWORKS	
BLUETOOTH	
TURN ON/OFF BLUETOOTH	
CHANGE BLUETOOTH DEVICE NAME	
PAIR GXV3240 WITH A BLUETOOTH DEVICE	
UNPAIR A BLUETOOTH DEVICE	
EHS HEADSET	
USB	
SD CARD	
HDMI DEVICE	
EXPERIENCING THE GXV3240 APPLICATION PHONE	179



Table of Tables GXV3240 User Guide

Table 1: GXV3240 Technical Specifications	19
Table 2: GXV3240 Equipment Packaging	23
Table 3: GXV3240 Connectors	24
Table 4: GXP2200EXT Packaging	25
Table 5: GXV3240 Status Bar Notification Icons	43
Table 6: GXV3240 Keypad Buttons	49
Table 7: GXV3240 MWI LED Status	52
Table 8: GXV3240 Feature Code	



Table of Figures GXV3240 User Guide

Figure 1: GXV3240 Front View	23
Figure 2: GXV3240 Back View	24
Figure 3: GXV3240 Back View with GXP2200EXT	26
Figure 4: GXV3240 Default Home Screen	29
Figure 5: GXV3240 Onscreen Menu	
Figure 6: GXV3240 Finger Gestures on the Touch Screen	
Figure 7: GXV3240 Desktop Menu	
Figure 8: Add Application Shortcut to the Desktop	
Figure 9: Add Widget to the Desktop	34
Figure 10: Open Clock Widget	35
Figure 11: Resize Digital Clock Widget	
Figure 12: Remove Clock Widget from Desktop	
Figure 13: GXV3240 Choose Wallpaper	
Figure 14: GXV3240 Recent Applications	
Figure 15: Set Up Home Idle Screen	
Figure 16: Delete Idle Screen	40
Figure 17: GXV3240 Top Status Bar	41
Figure 18: GXV3240 Top Status Bar - Notification	41
Figure 19: System Settings in Status Bar	47
Figure 20: GXV3240 Keyboard	49
Figure 21: GXV3240 Onscreen Keyboard - English Keyboard	51
Figure 22: English Keyboard - Number and Symbols	51
Figure 23: GXV3240 Account Widget	53
Figure 24: GXV3240 Dial Screen	54
Figure 25: Disable Video Call Feature on Dial Screen	55
Figure 26: GXV3240 Programmable Keys	55
Figure 27 GXV3240 View Contacts	57
Figure 28 GXV3240 Call History	58
Figure 29 Direct IP Call	59
Figure 30: Single Incoming Call - Audio	60
Figure 31: Single Incoming Call - Video	61
Figure 32: Single Incoming Call – Preview-1	61
Figure 33: Single Incoming Call – Preview-2	62
Figure 34: Single Incoming Call - Call Forward-1	62
Figure 35: Single Incoming Call - Call Forward-2	63
Figure 36: Call Waiting	63
Figure 37: Call On Hold	64
Figure 38: GXV3240 Call Recording	65



Figure 39: GXV3240 Call Mute	65
Figure 40: Turn on Video during Audio Call	66
Figure 41: Accept Video during Audio Call	67
Figure 42: Switch Audio Channel during Call	68
Figure 43: Switch Audio Channel during Call - Connected	68
Figure 44: Blind Transfer	69
Figure 45: Attended Transfer	70
Figure 46: Attended Transfer - Transferring	70
Figure 47: Attended Transfer – Split	71
Figure 48: Attended Transfer	72
Figure 49: GXV3240 Conference Screen	73
Figure 50: GXV3240 Conference - Add New Call to the Conference	74
Figure 51: GXV3240 Conference - Add Existing Call to Conference	74
Figure 52: 4-way Conference Call Established	75
Figure 53: Missed Call Screen	77
Figure 54: Enable/Disable DND	78
Figure 55: Retrieve Voicemail	79
Figure 56: Call Forward - Unconditional	80
Figure 57: Call Forward - Time Based	80
Figure 58: Call Forward - Busy/No Answer	80
Figure 59: GXV3240 MPK APP - Add Number	81
Figure 60: GXV3240 MPK APP - Add Number from Contacts	
Figure 61: GXV3240 MPK APP - Number List	
Figure 62: GXV3240 SCA Settings on LCD	
Figure 63: GXV3240 SCA Settings on Web UI	
Figure 64: GXV3240 Main Page of Contacts	
Figure 65: GXV3240 Local Contacts	90
Figure 66: GXV3240 Contacts - Add New Contact	91
Figure 67: GXV3240 Contacts - Import Contacts	
Figure 68: GXV3240 Contacts - Export Contacts	
Figure 69: GXV3240 Contacts - Download Contacts	
Figure 70: GXV3240 Contacts - Select Contacts	
Figure 71: GXV3240 Contacts - Contacts Options	
Figure 72: Add Contacts to Favorites	
Figure 73: GXV3240 Contacts - Add New Group	
Figure 74: GXV3240 Contacts - Contact Options	
Figure 75: GXV3240 Contacts - Storage Status	
Figure 76: GXV3240 Contacts Options- Account	
Figure 77: Add Account to Sync up in Contact	
Figure 78: Add Google Account to Sync up in Contact	
Figure 79: Sign in Google Account	



Figure 80: Restore Blocked Number	
Figure 81: GXV3240 Blacklist - Add Blacklist	
Figure 82: Manually Add Number to Blacklist	105
Figure 83: Edit Entry from Blacklist	105
Figure 84: Blacklist Settings	
Figure 85: GXV3240 Main Page of Call History	
Figure 86: GXV3240 Call History	110
Figure 87: GXV3240 Call History - Options	111
Figure 88: GXV3240 Call History - Details	112
Figure 89: GXV3240 SMS Message	113
Figure 90: View SMS Dialog	114
Figure 91: Create New Message	114
Figure 92: Sign In Calendar with Google Account	
Figure 93: View Calendar	118
Figure 94: View Calendar by Month	118
Figure 95: View Calendar by Day	119
Figure 96: Create Event	
Figure 97: Sign In Email	
Figure 98: Select Email Account Type	
Figure 99: Email Account Type - POP3	
Figure 100: Email Account Type - IMAP	
Figure 101: Email Account Type - EXCHANGE	
Figure 102: Email Account Settings	
Figure 103: Multiple Email Accounts	
Figure 104: GXV3240 GS Market	
Figure 105: GXV3240 GS Market - Downloaded Applications	
Figure 106: GXV3240 GS Market - Installed Applications	
Figure 107: GXV3240 GS Market - Uninstall Applications	
Figure 108: GXV3240 File Manager	
Figure 109: File Manager Root Directory	
Figure 110: Paste File	
Figure 111: GXV3240 File Manager	
Figure 112: File Manager Root Directory	
Figure 113: Paste File	
Figure 114: GXV3240 File Manager	
Figure 115: Delete File(s) via File Manager	
Figure 116: Rename File	
Figure 117: FTP Server - Start	
Figure 118: FTP Server - Stop	
Figure 119: FTP Server - Settings	
Figure 120: Normal Recorder	



Figure 12	21: Normal Recorder - Start Recording	140
Figure 12	22: Normal Recorder - End Recording	140
Figure 12	23: Call Recorder	141
Figure 12	24: Downloads	141
Figure 12	25: GXV3240 Location	142
Figure 12	26: GXV3240 Diagnosis	143
Figure 12	27: GXV3240 Camera	145
Figure 12	28: GXV3240 Camera Settings	146
Figure 12	29: GXV3240 Gallery	147
Figure 13	30: GXV3240 Gallery - Edit Picture	148
Figure 13	31: GXV3240 Gallery - Picture Options	148
Figure 13	32: GXV3240 Music - Refresh Music List	150
Figure 13	33: GXV3240 Music - Play a Song	150
Figure 13	34: GXV3240 Music - Options	151
Figure 13	35: GXV3240 Music - Sort Songs	151
Figure 13	36: GXV3240 Music - Create Playlist	152
Figure 13	37: GXV3240 Web Browser	153
Figure 13	38: GXV3240 Browser Menu Options	154
Figure 13	39: Open New Window in Browser	154
•	40: GXV3240 Web Browser-Bookmarks	
Figure 14	41: GXV3240 RSS News	157
Figure 14	42: GXV3240 RSS News Settings	158
Figure 14	43: GXV3240 Weather	159
Figure 14	44: GXV3240 Weather Settings	159
Figure 14	45: GXV3240 Weather Update Settings	160
Figure 14	46: GXV3240 PNP Settings	166
Figure 14	47: GXV3240 Connect to Wi-Fi	170
Figure 14	48: GXV3240 Connect to Wi-Fi Show Advanced Options	171
Figure 14	49: GXV3240 Bluetooth - Paired Device	173
-	50: Settings->Display->HDMI	
Figure 15	51: Settings->Display->HDMI Control	176
Figure 15	52: Settings->Display->HDMI Output Format	177
Figure 15	53: Settings->Display->HDMI Color Mode	177
Figure 15	54: Settings->Display->HDMI Display Settings	178
Figure 15	55: Settings->Display->HDMI Audio Channel Switch	178



This page intentionally left blank



DOCUMENT PURPOSE

This User Guide describes the basic concept and tasks necessary to use and configure your GXV3240. This document covers the topics of phone installation, making basic calls, using phone's built-in applications and basic features. To learn the advanced features and configurations, please visit link http://www.grandstream.com/support to download the latest "GXV3240 Administration Guide".



GNU GPL INFORMATION

GXV3240 firmware contains third-party software licensed under the GNU General Public License (GPL). Grandstream uses software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license.

Grandstream GNU GPL related source code can be downloaded from Grandstream web site from: <u>http://www.grandstream.com/support/fag/gnu_gpl</u>.



CHANGE LOG

This section documents significant changes from previous versions of GXV3240 user manuals. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

FIRMWARE VERSION 1.0.3.75

- Add Video Display Mode explanations for video answer feature [MAKE PHONE CALLS]
- Add Phonebook Key Function explanations for Phonebook option [CONTACTS]

FIRMWARE VERSION 1.0.3.62

 Add Disable Video Call Feature option explanations and screenshots for making phone calls [MAKE PHONE CALLS]

FIRMWARE VERSION 1.0.3.55

• Add Authentication Type for BroadSoft Directories [BROADWORKS XSI CONTACTS]

FIRMWARE VERSION 1.0.3.46

• Add "End" key to complete attended transfer during attended transferring [ATTENDED TRANSFER]

FIRMWARE VERSION 1.0.3.37

• Add to consult the third party before attended transferring the call [ATTENDED TRANSFER]

FIRMWARE VERSION 1.0.3.30

- Add Call Forward option on incoming call page [SINGLE INCOMING CALL]
- Add option to dismiss the prompt missed call log on LCD [MISSED CALL]
- Add option to hide IP address on Account Widget [ACCOUNT STATUS]
- Add Event Notify feature [ACTIONURL]
- Add Mute Key Features While Idle [MUTE]



FIRMWARE VERSION 1.0.3.22

- Add BS-IM&P [BS-IM&P]
- Add PNP [PNP]
- Update HDMI Device [HDMI DEVICE]

FIRMWARE VERSION 1.0.3.6

- Add WiFi Static IP and PPPoE Setting [ADD WI-FI NETWORKS]
- Add Set Programmable Keys On Unregistered Account [SET PROGRAMMABLE KEYS ON UNREGISTERED ACCOUNT]

FIRMWARE VERSION 1.0.1.54

- Add BroadWorks Xsi Contacts [BROADWORKS XSI CONTACTS]
- Add BroadWorks Xsi Call History [BROADWORKS XSI CALL HISTORY]
- Add Preview for video calls Contacts [SINGLE INCOMING CALL]

FIRMWARE VERSION 1.0.1.39

• Update screenshots

FIRMWARE VERSION 1.0.1.29

• This is the initial version.



WELCOME

Thank you for purchasing Grandstream GXV3240 IP Multimedia Phone for Android[™]. The GXV3240 combines a 6-line IP video phone with the power of a multi-platform video conferencing solution and the convenience of an Android smartphone to offer an all-in-one voice, video, data and mobility solution. The GXV3240 is a 6-line IP multimedia phone with a 4.3" capacitive touchscreen that runs on Android[™] OS 4.2, which offers full access to the hundreds of thousands of Android apps in the Google Play Store - including business productivity apps such as Skype[™], Microsoft Lync[™], Salesforce1[™] and GoToMeeting[™]. The phone features dual Gigabit ports, HD audio and HD video, a built-in web browser, integrated Wi-Fi (802.11b/g/n) for network flexibility, PoE and a tiltable CMOS camera. The GXV3240 is compatible with the GXP2200 Extension Module, allowing for quick and easy access to up to 160 contacts at the touch of a finger. The GXV3240's integrated Bluetooth allows users to sync calendars and contacts between their mobile phone and the GXV3240, use hands-free Bluetooth headsets, and to transfer calls between the GXV3240 and their mobile phone. By combining a state-of-the-art IP phone, an advanced video conferencing solution, and the powerful Android operating system, businesses throughout the world can now use the GXV3240 for all communication and productivity needs.

Caution:

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.

Marning:

Please do not use a different power adaptor with the GXV3240 as it may cause damage to the products and void the manufacturer warranty.

This document is subject to change without notice. The latest electronic version of this user manual is available for download here:

http://www.grandstream.com/support

Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.



FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information (SAR)

This device is designed and manufactured not to be exceeded the emission limits for exposure to radio frequency RF energy set by the Federal Communications Commission of the United States. The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate (SAR), and the SAR limit set by FCC is 1.6 W/kg.

This device is complied with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1992, and has been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This device has been tested, and meets the FCC RF exposure guidelines when tested with the device directly contacted to the body. RF exposure compliance with anybody-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hereby, Grandstream declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



PRODUCT OVERVIEW

FEATURE HIGHLIGHTS

- 6 lines with up to 6 SIP accounts including FREE IPVideoTalk account with video mail, up to 6-way audio conference and 3-way video conference, phonebook with up to 1000 contacts, call history with up to 1000 records.
- Dual switched auto-sensing 10/100/1000Mbps Gigabit network ports, Wi-Fi (802.11b/g/n), PoE+, Bluetooth, USB, SD, HDMI, EHS with Plantronics headsets support, support for up to 4 cascaded GXP2200EXT modules.
- 4.3" (480x272) capacitive (5 points) touch screen TFT LCD, mega pixel CMOS sensor camera with privacy shutter.
- HD wideband audio, full-duplex hands-free speakerphone with advanced acoustic echo cancellation.
- Runs the Android[™] Operating System 4.2 and offers full access to the Google Play Store which includes thousands of business productivity apps such as Skype, Microsoft Lync, SalesForce1, and GoToMeeting.
- Integrate with Grandstream's GXV series of IP video surveillance cameras to view live camera feeds and to receive alerts/alarms from IP cameras installed on the same network.
- Offers a multi-platform video conferencing solution (Grandstream's Free IPVideoTalk, Skype, Microsoft Lync, and more).
- Create Android apps for any business need to run on the GXV3240 using Google's API and Grandstream's SDK toolkit.

GXV3240 TECHNICAL SPECIFICATIONS

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, NTP, STUN, SIMPLE, LLDP-MED, LDAP, TR-069, 802.1x, TLS, SRTP
Network Interfaces	Dual switched 10/100/1000 Mbps ports with integrated PoE
Graphic Display	4.3"(480×272) capacitive (5 points) touch screen TFT LCD
Camera	Tiltable mega pixel CMOS camera with privacy shutter
Bluetooth	Yes, integrated. Bluetooth 4.0 + EDR
Wi-Fi	Yes, integrated. 802.11b/g/n



Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets), USB, SD, Mini HDMI, extension module port	
Feature Keys	11 function keys for PHONEBOOK, BACKSPACE, HEADSET, MUTE, HOLD, MESSAGE, TRANSFER, CONFERENCE, SPEAKERPHONE, SEND/REDIAL, VOLUME. 3 dedicated Android keys for HOME, MENU, and BACK	
Voice Codec	Support for G.711 μ /a, G.722 (wide-band), G.726-32, iLBC, Opus (pending), G.729 (pending), in-band and out-of-band DTMF (In audio, RFC2833, SIP INFO)	
Video Codec and Capabilities	H.264 BP/MP/HP, video resolution up to 480p, frame rate up to 30 fps, bit rate up to 2Mbps, 3-way conference, anti-flickering, auto focus and auto exposure, PIP (Picture-in-Picture), on-screen-display, camera block, still picture capture/store, video recording, visual voice message indicator	
Telephony Features	Hold, transfer, forward (unconditional/no-answer/busy), call park/pickup, 6-way audio conference, shared-call-appearance (SCA) / bridged-line-appearance (BLA), virtual MPK, downloadable phone book (XML, LDAP), call waiting, call history, boss-secretary virtual button, flexible dial plan, hot desking, personalized music ringtones, server redundancy & fail-over	
Sample Applications	Skype, Google Hangouts, Microsoft Lync, Web browser, Adobe Flash, Facebook, Twitter, Youtube, news, weather, stock, Internet Radio, Pandora, Last.fm, Yahoo Flickr, Photo bucket, alarm clock, Google calendar, mobile phone data import/export via Bluetooth, etc. API/SDK available for advanced custom application development	
Applications Deployment	Allow various Android operating system 4.2 compliant applications to be developed, downloaded and run in the embedded device with provisioning control	
HD Audio	Yes, both handset and speakerphone support HD (wide-band) audio	
Base Stand	Yes, integrated stand with 2 adjustable angles. Wall mountable	
Extension Module	Yes, can power up to 4 GXP2200EXT modules which feature a 128x384 graphic LCD, 20 quick-dial/BLF keys with dual-color LED, 2 navigation keys, and less than 1.2W power consumption per unit	
QoS	Layer 2 QoS (802.1Q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS	
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, TLS, SRTP (pending), HTTPS, 802.1x media access control	
Multi-language	English, German, Italian, French, Spanish, Portuguese, Russian, Croatian, Chinese, Korean, Japanese, and more	
Upgrade/ Provisioning	Firmware upgrade via TFTP / HTTP / HTTPS or local HTTP upload, mass provisioning using TR-069 or AES encrypted XML configuration file	



Power and Green Energy Efficiency	Universal power adapter included: Input: 100-240VAC 50-60Hz; Output: 12VDC, 1.5A (18W); Integrated PoE+ (Power-over-Ethernet) 802.3at, Class 4
Physical	Dimension: 196.5mm (W) x 206.2mm (L) x 85.2mm (H) Unit weight: 0.92kg Package weight: 1.45kg
Temperature and Humidity	Operating: 0°C to 40°C Storage: -10°C to 60°C Humidity: 10% to 90% Non-condensing
Package Content	GXV3240 phone, handset with cord, base stand, universal power supply, network cable, lens cleaning cloth, quick installation guide, brochure, GPL license
Compliance	FCC: Part 15 (CFR47) Class B, Part15C, MPE, UL 60950 (Power Adapter) CE: EN55022 Class B, EN55024 Class B, EN61000-3-2, EN61000-3-3, EN60950-1, EN300-328, EN301-489, EN62311, EN62479, RoHS RCM: AS/ACIF S004, AS/NZS CISPR22/24 Class B, AS/NZS 60950, AS/NZS 4268, AS/NZS 4771



This page intentionally left blank



INSTALLATION

EQUIPMENT PACKAGING

Table 2: GXV3240 Equipment Packaging

Main Case	1
Handset	1
Phone Cord	1
12V DC Power Adaptor	1
Ethernet Cable	1
Phone Stand	1
Wall Mount	1
Screen Cleaning Cloth	1
Quick Installation Guide	1

CONNECT YOUR PHONE

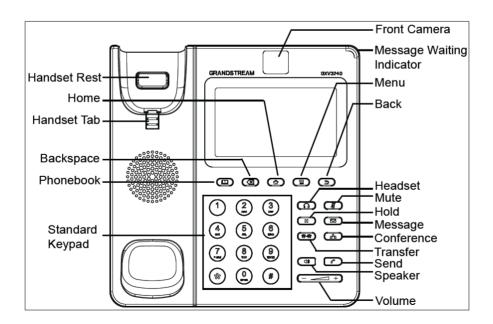


Figure 1: GXV3240 Front View



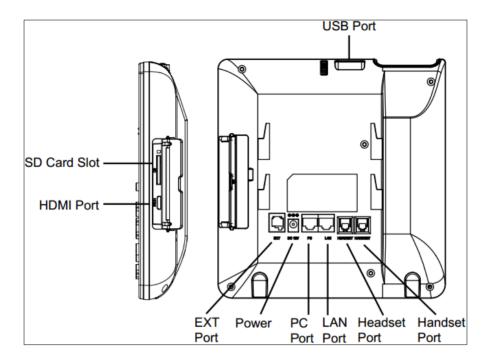


Figure 2: GXV3240 Back View

Table 3: GXV3240 Connectors

USB Port	USB devices can be connected via the USB port. For example, connect a USB flash drive to save captured pictures.
SD Card Slot	Connect SD storage device to the SD Card Slot.
HDMI Port	Connect display device to the HDMI port via HDMI cable.
Headset Port	RJ9 headset connector port.
Handset Port	RJ9 handset connector port.
PC Port	10/100/1000Mbps RJ-45 port connecting to PC.
LAN Port	10/100/1000Mbps RJ-45 port connecting to Ethernet.
Power Jack	12V DC Power connector port.
EXT Port	RJ11 connector port to connect the extension board GXP2200EXT.

To set up the GXV3240 as your desk phone, follow the steps below:

- 1. Attach the phone stand to the back of the phone where there is a slot for the phone stand. Upper part and bottom part are available for two angels;
- 2. Connect the handset and main phone case with the phone cord;



- 3. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable;
- 4. Connect the 12V DC output plug to the power jack on the phone; plug the power adapter into an electrical outlet. If PoE switch is used in step 3, this step could be skipped;
- 5. The LCD will display the booting up screen or firmware upgrading information. Before continuing, please wait for the main screen display to show up.

GXV3240 EXTENSION MODULE (GXP2200EXT)

The GXV3240 uses GXP2200EXT as the extension module. The extension module is an ideal solution for the busy enterprise environment looking to add the ability to receive and dispatch calls efficiently. Each GXP2200EXT extension module has 20 programmable buttons, LEFT and RIGHT buttons, supporting 40 Multiple Purpose Keys to be configured. GXV3240 supports up to 4 extension modules, adding 160 fully programmable phone extensions to the phone.

Table 4: GXP2200EXT Packagi	ng
-----------------------------	----

GXP2200EXT Board	1
GXP2200EXT Stand	1
RJ11-RJ11 Cable	1
Connector Plate	1
Screws	4
Quick Installation Guide	1

A Note:

The GXP2200EXT is an additional accessory for the GXV3240. Therefore, the GXP2200EXT (including extension module accessories for installation) is not included in the GXV3240 box.

To set up the GXP2200EXT with the GXV3240, please follow the steps below:

- 1. On the back of the GXV3240 and the GXP2200EXT, there are slots for connector plate. Attach the connector plate between the slots for GXV3240 and the GXP2200EXT;
- 2. Apply the screws provided and securely tighten them in (See Figure 3: GXV3240 Back View with GXP2200EXT);



- 3. Connect the GXP2200EXT to the GXV3240 via the EXT port using the RJ11-RJ11 cable provided with the GXP2200EXT;
- 4. Install the phone stand on the GXV3240 and the GXP2200EXT;
- 5. Power up the GXV3240. The GXP2200EXT will show the booting up screen with version information and connecting status;
- 6. After successfully booting up, the GXP2200EXT will stay in idle. Press and hold the LEFT button for about 3 seconds to check the version information and status.

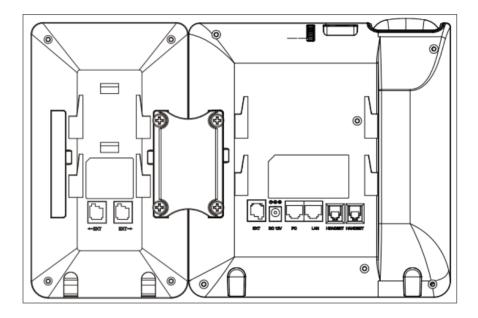


Figure 3: GXV3240 Back View with GXP2200EXT

The GXP2200EXT can be configured via the web GUI of the GXV3240 connected. After successfully configured, press LEFT or RIGHT button on the GXP2200EXT and users could browse all the MPK's status in different pages.

For more information on installing, connecting and configuring the GXP2200EXT with GXV3240, please refer to the GXP2200EXT user manual in <u>http://www.grandstream.com/support</u>.



SAFETY COMPLIANCES

The GXV3240 phone complies with FCC/CE and various safety standards. The GXV3240 power adapter is compliant with the UL standard. Use the universal power adapter provided with the GXV3240 package only. The manufacturer's warranty does not cover damages to the phone caused by unsupported power adapters.

WARRANTY

If the GXV3240 phone was purchased from a reseller, please contact the company where the phone was purchased for replacement, repair or refund. If the phone was purchased directly from Grandstream, please contact Grandstream Support for a RMA (Return Materials Authorization) number before the product is returned. Grandstream reserves the right to remedy warranty policy without prior notification.

Marning:

Use the power adapter provided with the phone. Do not use a different power adapter as this may damage the phone. This type of damage is not covered under warranty.



This page intentionally left blank



GETTING TO KNOW GXV3240

USE THE TOUCHSCREEN

When the phone boots up in HOME screen, the LCD will display as below. A registered account is shown in the following figure and users might need register their own account to have the account status displayed.

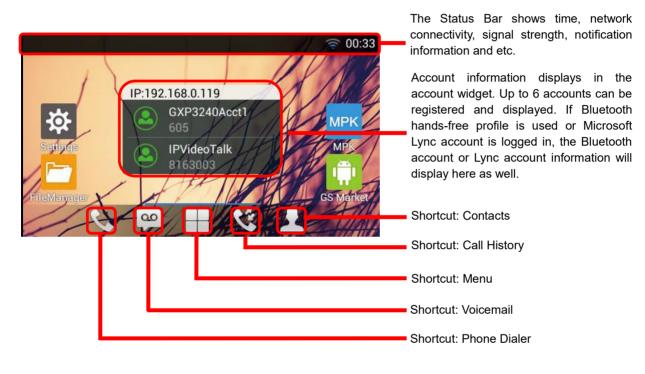


Figure 4: GXV3240 Default Home Screen

Tap on the onscreen Menu icon *H*, the settings and applications menu will be brought up as shown below.



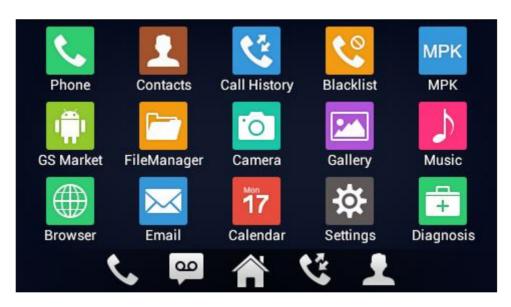


Figure 5: GXV3240 Onscreen Menu

To fully manipulate the GXV3240 capacitive touch screen, use your fingers to operate the following on the GXV3240 icons, buttons, menu items, onscreen keyboard and etc.

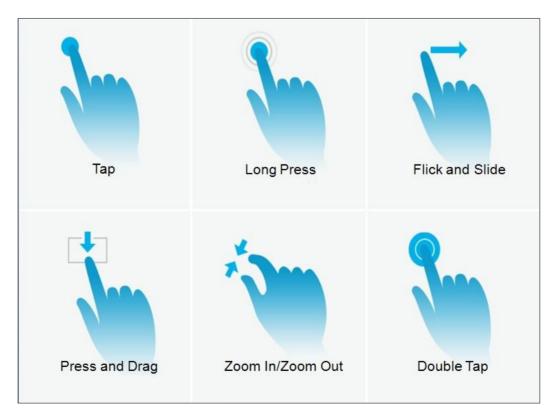


Figure 6: GXV3240 Finger Gestures on the Touch Screen



• Тар

Slightly touch the screen with fingertip to initiate menu, options or applications. For example, to select items on the screen (e.g., setting options, apps and etc); to press onscreen buttons (e.g., "End" or "Options" softkey during the call); to type letters and symbols using the onscreen keyboard.

Long Press

Touch the screen with fingertip and press for about 2 seconds without lifting your finger from the screen till an action occurs. For example, long press on a picture to bring up selection option.

• Flick and Slide

Touch the screen with fingertip and slide over the screen. For example, user could slide up to scroll up the page, slide down to open dropdown menu, slide left or slide right to delete an item from the list. If your finger stays on the screen for too long, the item may be selected and sliding won't occur.

• Press and Drag

Touch and press the item, then move it by dragging it up, down, left or right, without lifting your finger from the screen.

• Zoom In/Zoom Out

Place two fingers on the screen, then pinch them together (zoom out) or spread them apart (zoom in).

• Double Tap

Quickly touch the screen twice with fingertip to switch between default display and zoomed-in display. This is usually used when viewing photos or web pages.

USE THE DESKTOP

DESKTOP MENU

When the GXV3240 is on idle screen, press the MENU button to bring up phone's menu. Users can access to following in the desktop menu:



		▶ 🗢 10:41
	Wallpaper	1/1/1
4	Preview	MPK
Settings	Edit Widgets	MPK
	Folder	
FileManager	Thread Manager	GS Market
1	System settings	201/1/

Figure 7: GXV3240 Desktop Menu

• Wallpaper

Select wallpaper from Gallery, Wallpapers or Live Wallpapers.

• Preview

Add, delete or edit desktop.

• Edit Widget

Add widgets to the desktop by dragging the widget from the bottom menu to the desktop.

• Thread Manager

Manage running applications on the GXV3240. For more details, please refer to section [*MANAGE RUNNING APPLICATIONS*].

• System settings

Access phone's settings such as "Personalized Account", "Wireless & Network", "Sound", "Display", "Storage", "Application" and etc.



ADD APPLICATION SHORTCUT TO DESKTOP

The shortcut of the applications installed on the GXV3240 can be added to the desktop for users' easy access. To add shortcut:

- 1. Tap on the screen Menu icon to access the applications first.
- 2. Select and press the application icon for about 2 seconds. The screen will show "Move to Desktop" on the bottom.
- 3. Drag the icon to the bottom of the screen. Phone's idle screen will immediately show up for you to place the shortcut.

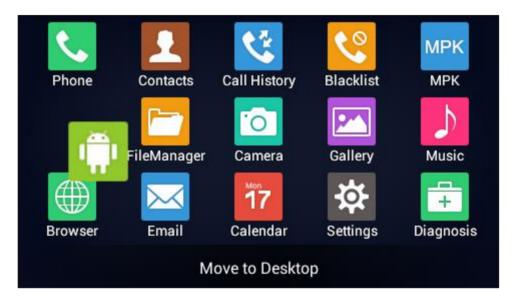


Figure 8: Add Application Shortcut to the Desktop

ADD WIDGET TO DESKTOP

The GXV3240 provides widgets like account bar (with different number of accounts supported), clock, calendar, contacts, Email, MPK, system setting shortcut, weather and etc. Users could conveniently add those widget to the desktop as preferred. To add a widget:

- 1. Tap on the Menu button (I) and select "Edit Widgets".
- 2. Different widgets will be displayed on the bottom of the screen.
- 3. Select and drag the widget to the desired spot to be placed on the desktop. Please make sure there is enough space on the desktop. Otherwise, the widget won't be added.



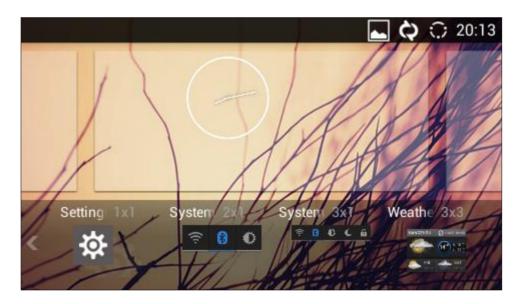


Figure 9: Add Widget to the Desktop



MANAGE DESKTOP ITEMS

On the GXV3240 desktop, users could tap on the desktop items to manage shortcuts and widgets. The following operations can be done:

• Tap on the shortcut icon to open the application.

For example, tap on "FileManager" icon 🗁 to access file manager application.

• Tap on the widget to open and edit it.

For example, tap on the analog clock on the desktop. The clock settings will be brought up for users to set up timer, stop watch or alarm.

Clock		FTP	≯	\odot	12:42
X	Ó I Ø				
	0 0				
		\frown			
		')			
			-		
	TUE, MAY 13				
ŝ	0				•
\bigcirc					=

Figure 10: Open Clock Widget

 Certain widgets such as Calendar, Clock and Bookmark can be resized on the desktop. To resize a widget, touch and press the widget for about 2 seconds. Then lift your finger from the screen. This will bring up the blue frame as shown in [*Figure 11: Resize Digital Clock Widget*]. Touch and drag the border of the frame to adjust the size.





Figure 11: Resize Digital Clock Widget

• Move the shortcut/widget

To move a shortcut/widget to a different spot on the desktop or to a different idle screen, touch and press the item for about 2 seconds until a recycle bin icon shows up on the bottom of the screen. Drag the item up/down/left/right to the destination spot on the screen. Lift your finger once done.

• Remove the shortcut/widget

To remove an item from the desktop, touch and press the item for about 2 seconds. A recycle bin icon will show up on the bottom of the screen. Drag the item to the recycle bin to remove it.



Figure 12: Remove Clock Widget from Desktop



⚠ _{Note:}

Removing operation only removes the shortcut of the application on the screen. The application itself will not be uninstalled.

SET WALLPAPERS

On the GXV3240 desktop, touch and press on an empty spot for about 3 seconds to bring up wallpaper settings. Or users could press menu button and select "Wallpaper" to set up the wallpaper for the desktop.

Users could select wallpaper from different categories:

• Gallery

Open Gallery application and tap on the picture to preview. Touch and drag the blue frame border to select the area of the picture. Then tap on "OK" to set the selected area of the picture as wallpaper.

• Live Wallpapers

Open a list of sample animated wallpapers built-in with the GXV3240. Select the live wallpaper to preview and then tap on "Set wallpaper".

• Wallpapers

Open a list of sample wallpapers built-in with the GXV3240. Select the picture to preview and then tap on "Set wallpaper".



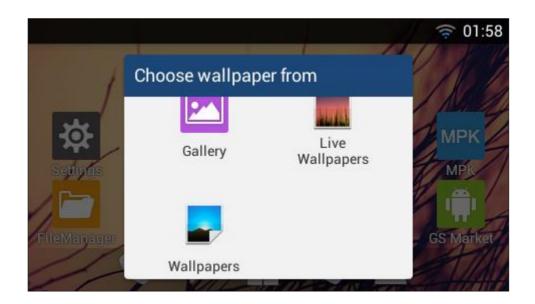


Figure 13: GXV3240 Choose Wallpaper

MANAGE RUNNING APPLICATIONS

after pressing Menu button

On the GXV3240 desktop, press the Home button for about 2 seconds or select "Thread Manager"

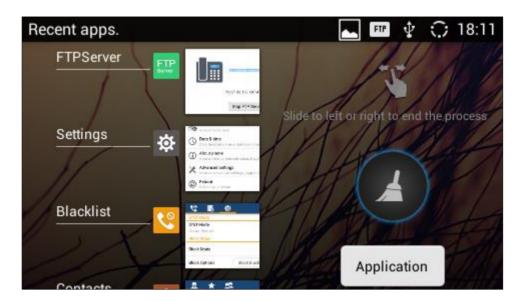


Figure 14: GXV3240 Recent Applications

Users could use the thread manager to do the following:

• Slide the running thread to the left or right to stop the application.



- Tap on icon **U** to delete all running threads.
- Tap on "Application" softkey to access application menu for advanced management options.

IDLE SCREEN

SWITCH IDLE SCREENS

The GXV3240 supports multiple idle screens by sliding the screen horizontally. On the GXV3240 screen, slightly touch an empty area and slide to the left or right using your finger to switch between different idle screens.

SET UP IDLE SCREEN

• Set home screen

Follow the steps below to set up the HOME screen.

- 1. GXV3240 is up and running on idle screen.
- Press the MENU button and tap on "Preview" option. This will zoom out all the screens as shown in [Figure 16: Delete Idle Screen].
- 3. The screen with 希 displayed is the HOME screen. Others are shown with icon 👘. Tap on the

icon 👘 to select the corresponding screen as the new HOME screen.

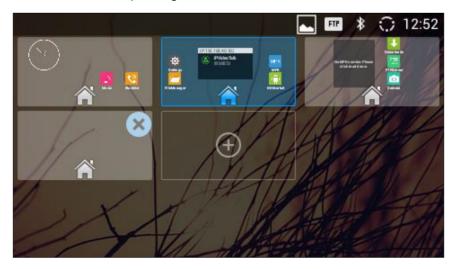


Figure 15: Set Up Home Idle Screen



• Add/Delete idle screen

As shown in *[Figure 15: Set Up Home Idle Screen]*, the screen with the blue frame highlighted is the current idle screen on the LCD. Users could add or delete idle screen.

> Add idle screen.

Tap on $^{\oplus}$ to add a new idle screen. Users could add up to 9 idle screens.

> Delete idle screen.

Tap 🗴 on the top right of the idle screen to delete the idle screen. Please make sure the apps,

shortcuts or widgets on the idle screen are removed first. Otherwise, the \bigotimes icon won't show for the idle screen.



Figure 16: Delete Idle Screen



USE THE STATUS BAR

The status bar on the top of the GXV3240 screen provides visual notification for the system settings and status, as well as quick access for important system settings. To access it, on the GXV3240 idle screen, slowly slide down from the top to the bottom of the screen as the following figure shows.

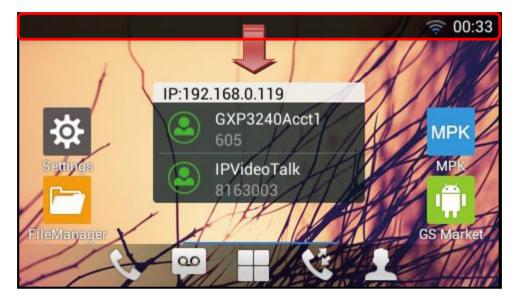


Figure 17: GXV3240 Top Status Bar

The running process will show up in the list. For example, the following figures indicates Google Play app is being downloaded at the moment.

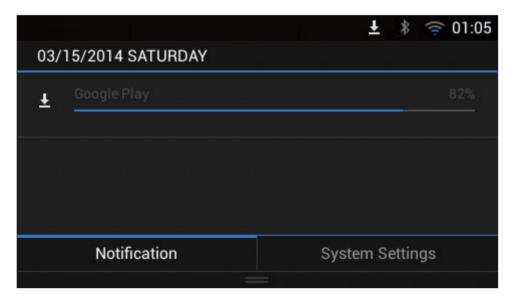


Figure 18: GXV3240 Top Status Bar - Notification



This page intentionally left blank



NOTIFICATIONS IN STATUS BAR

The following table describes the icons used on the status bar for notification purpose.

\odot	Network connected via Ethernet cable.
·•/	
\odot	Trying to connect to network via Ethernet cable.
ંદ્ર	Network disconnected via Ethernet cable.
٠.	Handset is off hook.
٩	Missed call.
v	One line is active.
\ >	Speaker is being used.
G	RJ9 headset is being used.
`	RJ9 headset mode is on. All the calls will be using RJ9 headset by default.
((;•	Wi-Fi is enabled and connected. Signal level: 1.
((; -	Wi-Fi is enabled and connected. Signal level: 2.
(;	Wi-Fi is enabled and connected. Signal level: 3.
(î:	Wi-Fi is enabled and connected. Signal level: 4.
*	Bluetooth is enabled.

Table 5: GXV3240 Status Bar Notification Icons



*	Bluetooth is enabled but not connected.
Q.	Bluetooth headset is connected.
_D^	Bluetooth headset is being used for calls.
÷	Downloading files via Bluetooth.
Ø	Alarm is set up and enabled.
29	DND is enabled.
筌	Mute is enabled.
≰×	Silent mode is enabled. When it's on, the incoming call/message won't produce ring tone/notification tone from phone's speaker.
	SD Card is inserted.
B	SD Card space full.
ţ	USB flash drive is inserted.
Ŧ	Downloading files via Internet connection.
Ô	Updating applications.
7	Calendar has event scheduled.
9	New voicemail to be retrieved.
\bowtie	Unread Email to be retrieved.



FTP	FTP server is running.
৫	Incoming call from blacklist contact.
<u>®</u>	Camera is disabled.
e	Contact storage is full.
HDMI	HDMI cable is connected to display device.
\$	New message to be retrieved.
R	SMS Message sent failure.
₩ ©	The phone is powered up using PoE.
\$	Call forward is set up for SIP account 1.
\$ 22	Call forward is set up for SIP account 2.
\$ 3	Call forward is set up for SIP account 3.
€\$4	Call forward is set up for SIP account 4.
<€₅	Call forward is set up for SIP account 5.
\$	Call forward is set up for SIP account 6.
G	More notifications on the status bar.
4	USB mouse is connected.




►	Music is playing using music app.
Ē	PPPoE is connected.
	PPPoE is not connected.
A	Warning message.



SYSTEM SETTINGS IN STATUS BAR

Slide down the top status bar and select **System Settings**. Users will see the following settings.

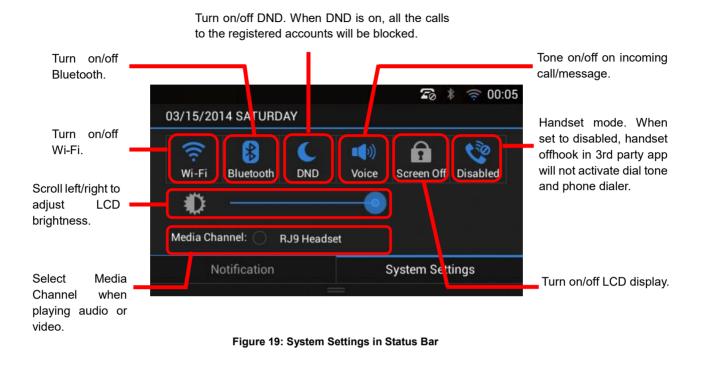

▲ Note:

Handset Mode is for audio path and GXV3240 dialer control when running 3rd party app that uses media path. Currently there are three options supported:

- **Enabled:** Default mode. When handset is lifted, audio will come through handset and the GXV3240 default dial screen will show.
- **Disabled:** In this mode, when running the 3rd party app, if handset is lifted, the audio path will switch to handset but GXV3240 default dial screen won't show (users won't hear dial tone either). Onhook the handset, the audio path will be switched to speaker. Under this mode, even the GXV3240 is not using the 3rd party app, picking up the handset will not activate the GXV3240 dialer. (Users can still use Speaker button to activate GXV3240 dialer under this mode.)
- Auto: In this mode, the GXV3240 will automatically detect if the audio path is used by 3rd party app first. If so, it will use the handset mode "Disabled". Otherwise, keep it in "Enabled" mode. Please note that running the 3rd party app doesn't necessarily mean the audio path is used by the 3rd party app. If the audio path is not occupied by the 3rd party app, the GXV3240 will still use the handset mode "Enabled".



This page intentionally left blank



USE THE KEYPAD

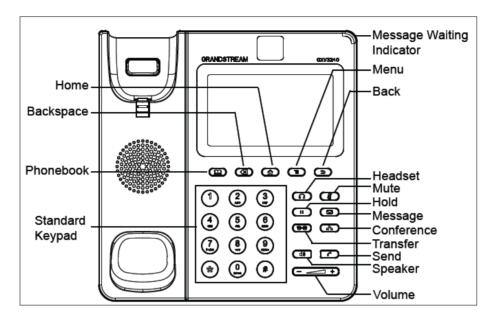


Figure 20: GXV3240 Keyboard

KEYPAD BUTTONS

Table 6: GXV3240 Keypad Buttons

	Contacts . Press to view and edit contact information.
$\overline{\otimes}$	Backspace . Press for backspace when entering characters and numbers.
	Home . Press to go back to Home screen; or press and hold it for about 2 seconds, the current running applications and Manage Applications button will show.
	Menu. Press to view options for different screen or applications.
C	Back. Press to go back.
G	Headset. Press to switch to headset mode.
Ŧ	Mute. Press to mute or unmute the call.
	Hold. Press to put call on hold or resume the call.



	Message. Press to view voicemail messages.
2-2	Transfer. Press to transfer call.
	Conference. Press to conference call.
(Speaker.
	Send/Redial.
+	Volume.

KEYPAD SHORTCUT FUNCTIONS

The GXV3240 supports keypad shortcuts for certain special system functions.

• Screenshot

Press the Menu button () for about 3 seconds to capture screenshot. The screenshot can be accessed via **FileManager->Internal Storage->Pictures->Screenshots**. The screenshot picture size is 480x272 pixels.

• Firmware upgrade via SD card

Insert the SD card to the GXV3240. The SD card should have the valid firmware bin file in it. Power cycle the phone and the MWI LED will light up. Wait until the MWI LED lights off. Then immediately press both "*" and "3" keys at the same time for about 8 seconds. Release the keys once the MWI LED lights up again. The phone will start the upgrading process.

USE THE ONSCREEN KEYBOARD

The GXV3240 onscreen keyboard can be activated by tapping on an input field.

• English Keyboard

This is the default keyboard on GXV3240. Touch and press the **example** key on the keyboard for about 2

seconds and it will switch to 💷, which can be used to access input options to switch input methods.



Q V	V ² E	E	R 1	٢	/ ໍ ໄ	ן ז) P
Α	S	D	F	G	Н	J	К	L
	Z	x	С	v	В	N	М	×
?123	, _						• _	Next

Figure 21: GXV3240 Onscreen Keyboard - English Keyboard

To switch input between lowercase and uppercase, tap on [Impercase] or [Impercase].

• Number and symbols

To input number and symbols, tap ^{?123} on the default keyboard to switch to number/symbols. Tap on

ABC to switch back. Tap on to access more symbols.

1	2	3	4	5	6	7	8	9	0
@	#	\$	%	&	*	-	+	()
= \ <		!			-	; /	/ 1	?	×
ABC		, _						•	Next

Figure 22: English Keyboard - Number and Symbols

▲ Note:

- To configure keyboard and input options, users could go to Settings->Language & Keyboard-> Keyboard & Input Methods.
- Users could touch and press the key on the keyboard for about 2 seconds to input the alternate character. For example, touch and press the "q" key for about 2 seconds can enter "1".

USE THE MESSAGE WAITING INDICATOR

The GXV3240 message waiting indicator LED is on the upper right corner of the device. It could notify the



users with different messages and status of the phone. Please refer to the status description below. **The priority for the LED indicator is from high to low in the following table**.

Color	LED Status	Description
	Fast Flashing	Incoming call
	Solid	Calling, Talking, Conferencing, Screensaver on when the LCD is off
	Slow Flashing	Call on hold
	Flashing	Missed call (s), New voicemail (s), New SIP Message (s)
	Solid	High memory usage, Maximum contact storage
	Fast Flashing	Upgrading
OFF	OFF	Normal



MAKE PHONE CALLS

REGISTER SIP ACCOUNTS

The GXV3240 supports up to 6 independent SIP accounts, including a pre-configured IPVideoTalk account registered on account 6. Users can make video calls and send messages to other IPVideoTalk accounts registered on another GXV32xx/GXV31xx. Each account can have separate SIP servers, usernames and NAT configurations.

ACCOUNT STATUS

On the idle screen, the account widget shows account name, number and registration status.

- The following figure shows the accounts are successfully registered (account icon is green).
- If the account icon is grey, it's still trying to register or unable to register.
- If the users have enabled Shared Call Appearance on the registered account, the account icon will be



• Microsoft Lync account and Bluetooth handsfree profile account will be displayed here too (if any).



Figure 23: GXV3240 Account Widget

Note: Users may go to web UI -> Maintenance -> Network Settings, uncheck "Show IP Address On Account Widget" to hide the IP address of the phone.

CONFIGURE SIP ACCOUNT

To register SIP account, users could directly configure from phone's LCD menu->Settings->Advanced Settings->Account. Or users could log in the GXV3240 web GUI->Account page to fill in the necessary registration information, i.e., Account active, Account name, SIP Server, SIP User ID, SIP Auth ID, SIP Auth Password and etc. Once the correct information is entered and saved, the account registration status will



show on the main screen.

▲ Note:

For web GUI login and configuration information, please refer to GXV3240 Administration Guide.

Once the account is successfully registered, users could use one of the following ways to bring up dial screen to start making calls.

- Take the handset off hook.
- Select an account from the account widget in the idle screen.
- On the bottom of the idle screen, tap on 💛 icon to open dial screen.
- Tap on to open "Phone" application which will bring up dial screen.
- Press the Speaker button (to bring up dial screen and the audio channel will be speaker.

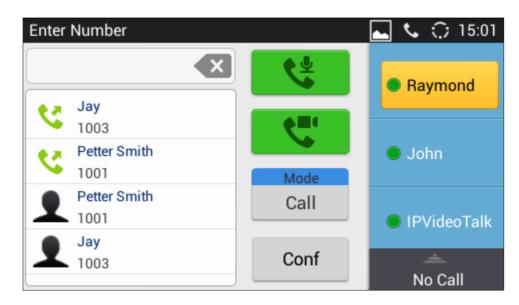


Figure 24: GXV3240 Dial Screen

If **Disable Video Call Feature** option is enabled, the **Video Call** option on GXV3240 dial screen will be hidden.



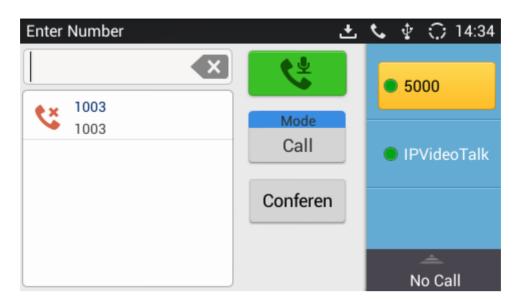


Figure 25: Disable Video Call Feature on Dial Screen

SET PROGRAMMABLE KEYS ON UNREGISTERED ACCOUNT

GXV3240 allows end users to setup shortcut keys on the Phone app. The shortcut keys only allows to take place the unregistered accounts. From example, if the phone enables the Account 1 and register it with a SIP server, end users have to set the shortcut keys on Account 2 to 6.

From Web UI, users can set the shortcut keys under the setting of Account X \rightarrow Call Settings \rightarrow Programmable keys. After setting, the programmable keys can be showed on the account bar in the phone app. The following screenshot is a speed dial key which takes place the Account 2 position. End user can tap the key to user Account 1 to dial the number 1001.

Enter Number		土 🗘 18:07
		• 1025
• 1001		
> 1001		1001
0004		1001
0004	Mode	Speed Dial
1010	Call	
> 1010	Gan	
0002		
0002	Conf	
		No Call

Figure 26: GXV3240 Programmable Keys



DIAL A NUMBER DIRECTLY

- 1. Use the methods mentioned above to open dial screen [Figure 24: GXV3240 Dial Screen].
- 2. Select the account to dial out on the right panel of the dial screen. The selected account will be highlighted in yellow background.
- 3. Enter the digits to be dialed out using the keypad. If the digit matches call history, a dropdown list of numbers will be displayed for users to select.
- 4. Tap on 🧐 (audio call only) or 🥲 (video call), or 🚺 (audio call only) to send the number.

If no key is pressed, the call will be automatically dialed out after 4 seconds timeout.

A Note:

- By default, the "No Key Entry Timeout" is 4 seconds, meaning if no key is pressed after starting entering number, the call will be automatically sent out after the timeout. The timeout interval can be configured under web GUI->Account->Call Settings.
- GXV3240 allows users to press # key as SEND key. This behavior can be disabled via option "Use # as Dial Key" under web GUI->Account->Call Settings.
- When the user enters the digit on the dial screen, if there is digit matching call history, or contacts name/number, the drop-down list will show the numbers. For example, if "John" is saved in the contacts, entering 5 (JKL) 6 (MNO) 4 (GHI) 6 (MNO) will show call log with 5646 as the first four digits, as well as John's number. Users could then directly select one of them from the list, instead of entering all the digits.

REDIAL

Users can dial out the last dialed number if there is dialed call log, using the same SIP account making the call last time. There are two ways to redial the last dialed number.

- When the phone is idle or off hook, press SEND button to redial.
- When the phone is on hook, press SEND button or # button (# key is used as dial key).

DIAL A NUMBER VIA CONTACT

Follow the steps below to dial a number via Contact.



- 1. Access Contacts by tapping on kicon on the bottom of the idle screen, or selecting from phone's menu.
- 2. Navigate in the contacts entries by sliding up/down on the screen.
- 3. Tap on the dial icon for the contact

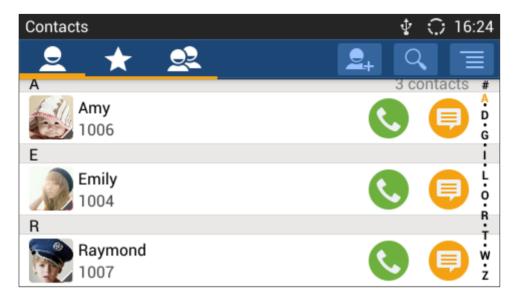


Figure 27 GXV3240 View Contacts

DIAL A NUMBER VIA CALL HISTORY

- 1. Access Call History by tapping on *icon* on the bottom of the idle screen, or selecting *icon* the phone Menu.
- 2. The LCD will display all call history types: "All", "Missed", "Outgoing" and "Incoming" calls.
- 3. Navigate in the call history list by selecting the call history category and sliding up/down on the screen.
- 4. Tap on the entry to dial out.



CallHistory(11) $\Psi \bigcirc 1$					
ং	V V	\$ \$	亩		
	 ⊎ Emily ℃ 1004-1007 		16:57 Duration 00:00		
			16:56 Duration 00:03		
			16:56 Duration 00:36		
			16:51 Duration 00:00		

Figure 28 GXV3240 Call History

DIRECT IP CALL

Direct IP Call allows two phones to talk to each other in an ad-hoc fashion without a SIP proxy. VoIP calls can be made between two phones if:

- Both phones have public IP addresses; Or
- Both phones are on the same LAN/VPN using private or public IP addresses; Or
- Both phones can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ).

To make a direct IP call, please follow the steps below:

- 1. Off hook the phone or select account in the idle screen to bring up dial screen on GXV3240;
- 2. Under "Mode" button in the call screen, tap on it and select the mode as "IP Call";
- 3. Input the target IP address. For example, if the target IP address is 192.168.1.60 and the port is 5062 (i.e., 192.168.1.60:5062), input the following:

192*168*1*60#5062

The * key represents the dot (.) and the # key represents the colon (:).

4. Press "SEND" (audio call only) / (video call) button to dial out.





Figure 29 Direct IP Call

▲ Note:

- The # will represent colon ":" in direct IP call rather than SEND key as in normal phone call;
- Port number is not mandatory when making direct IP call;
- Users need activate the first account on the GXV3240 to complete direct IP call;
- If you have a SIP server configured, direct IP call still works. If the devices are behind NAT, users might need configure NAT Traversal before using direct IP call. If you are using STUN, direct IP call will also use STUN;
- The phone needs to configure option "User Random Port" to "No" to accept direct IP calls;
- In GXV3240 Contacts, if the phone number is IP address, direct IP call can be made by dialing this contact.

ANSWER A CALL

SINGLE INCOMING CALL

• When the phone is in idle and there is an incoming audio call, the phone will show the call screen as below. Tap on "Answer" softkey to answer the call via speaker, or pick up the handset the answer the call.



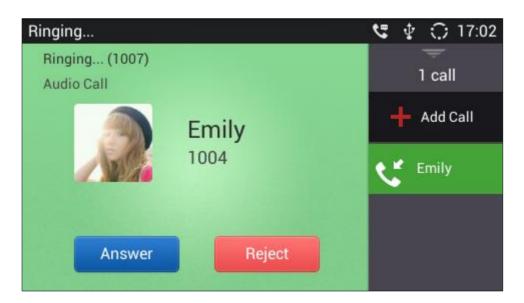


Figure 30: Single Incoming Call - Audio

• When the phone is in idle and there is an incoming video call, the phone will show the call screen as below. To answer the call with audio only, tap on "Audio Answer" to answer the call via speaker, or pick up the handset. To answer the call with both audio and video, tap on "Video Answer". During video call, the audio will switch to handset if picking up the handset.

Note: Users could select the Video Display Mode on phone's Web UI -> Advanced Settings -> Video Settings. Set the video display mode to "Original proportion", "Equal proportional cutting" or "Proportional add black edge". If set to "Original proportion", the phone displays video in its original proportion. If the video display proportion is different from the one of the phone, the phone will stretch or compress video to display it. If set to "Equal proportional cutting", the phone will cut video to meet its own display proportion. If set to "Proportional add black edge", the phone will display video in its original proportion, if still exists spare space, the phone will add black edge on it.



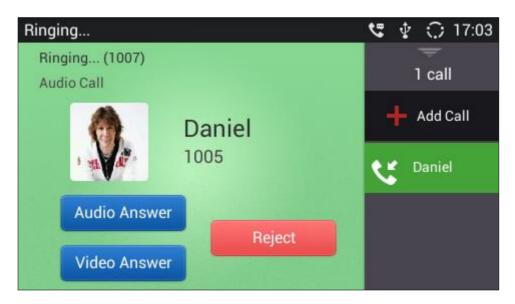


Figure 31: Single Incoming Call - Video

 If the phone set the "Preview" feature for the incoming call from Web UI, the phone will display one more key "Preview" when there is an incoming video call. End users will preview the remote end without answering the video call. After previewing, end user can tap "Answer" key to answer the video call or "Reject" key to reject it. This feature should be supported by the SIP server. Please contact service provider for more information.



Figure 32: Single Incoming Call – Preview-1



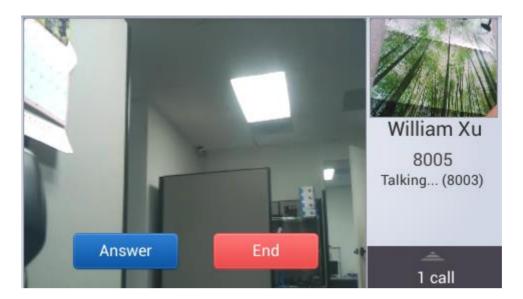


Figure 33: Single Incoming Call – Preview-2

• If the phone set to "Call Forward", the phone system will pop up the "Transfer" key on the LCD screen when there is an incoming call, and users could tap on it to show up the transferring page without answering the incoming call, then, users could transfer this incoming call to others.

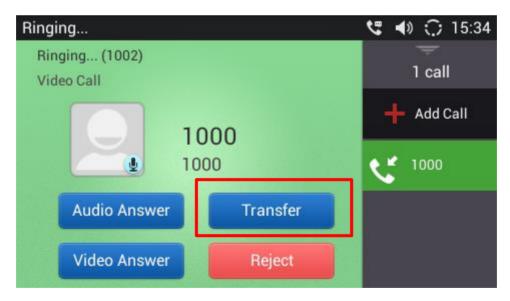


Figure 34: Single Incoming Call - Call Forward-1





Figure 35: Single Incoming Call - Call Forward-2

MULTIPLE CALLS/CALL WAITING

1. When there is another incoming call during active call, users will hear a call waiting tone, with the LCD displaying the caller name and ID for the incoming call. In the right panel, the account bar in green is the ringing line from "Ben"; the account bar in black is the current active call with "John". "3165" is the callee account name.

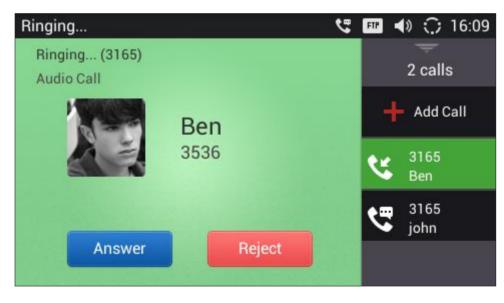


Figure 36: Call Waiting

2. Similar to single incoming call, if the incoming call is video call, users can choose "Audio Answer" or "Video Answer" to answer the call.



3. Once the new call is answered, the current active call will be placed on hold. If the new call is rejected by tapping on "Reject" softkey, the current active call will not be interrupted.

CALL HOLD

During the active call, press HOLD button **II** to put the call on hold. The LCD screen will show as below. To resume the call, press HOLD button again.

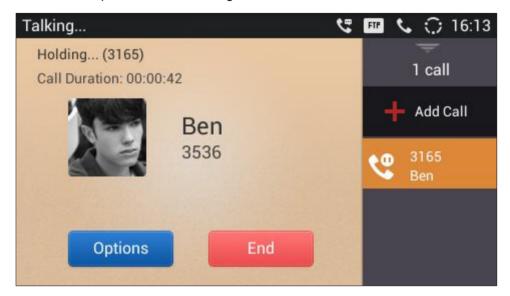


Figure 37: Call On Hold

CALL RECORDING

- 1. During the call, users could record the conversation to the phone by tapping on "Options"->"Start Recording" on the call screen.
- 2. Once done, tap on "Options"->"Stop Recording" or hang up the call.
- 3. The recording files can be retrieved from the GXV3240 application "Recorder"->"Call" category.



Talking	😋 🎟 📣 📿 16:17
Talking (3165) Call Duration: 00:00:06	1 call
Ben	🕂 Add Call
Start Recording 536	S 3165 Ben
Video On	
Options End	

Figure 38: GXV3240 Call Recording

MUTE

During an active call, press the Mute button 4 to mute the call. The mute icon $\overset{\checkmark}{4}$ will be displayed in the status bar on the top of the screen. Press the Mute button 4 again to unmute the call.

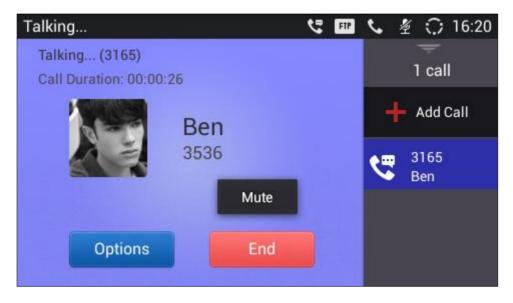


Figure 39: GXV3240 Call Mute

Note: Mute key could be set to "DND", "Idle Mute", and "Permanent Mute" mode while the phone is at idle



state.

TURN ON VIDEO DURING AUDIO CALL

Users could establish audio call first and then turn on video or accept video request during the call if the other party supports video call as well.

• Turn on video during audio call

During an active audio call, on the call screen, tap on "Options" and select "Video On", a video request will be sent to the other party.

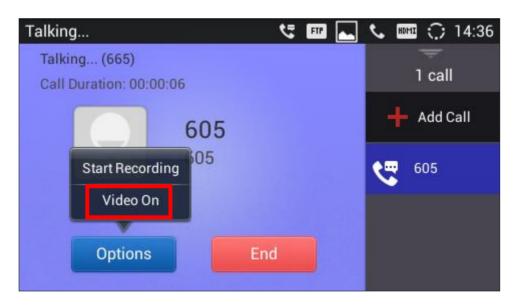


Figure 40: Turn on Video during Audio Call



• Accept video request

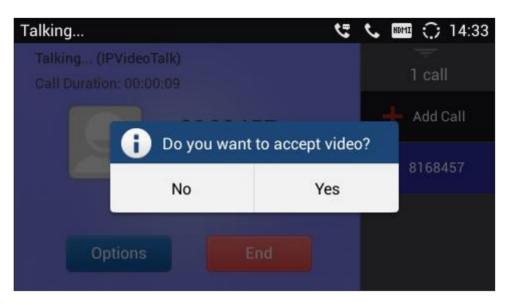


Figure 41: Accept Video during Audio Call

If the GXV3240 receives video request during the audio call, a message "Do you want to accept video?" will be prompted. Select "Yes" to establish video during the call. If the **Disable Video Call Feature** is enabled on GXV3240, the "Video On" option on GXV3240 will be hidden during the audio call. However, if the GXV3240 receives video request during the audio call, users could tap to accept the video request.

SWITCH AUDIO CHANNEL DURING CALL

• The GXV3240 allows users to switch among handset, speaker or headset (RJ9 headset, Plantronics EHS headset and Bluetooth headset) when making calls. Press the Hook Switch to switch to handset;

```
press the Headset button ( to switch to headset; press the Speaker button ( to switch to
```

speaker; or slide down the "System Settings" menu on talk screen, and press $\overset{\text{w}}{=}$ icon to switch to Bluetooth headset.

- If Bluetooth headset is connected, the audio will be automatically switched to Bluetooth headset once the call is established.
- The status bar on the top or the screen shows the current audio channel being used during the call. If pressing the corresponding key for the currently used audio channel, the call will be hang up.



	llking 05/27/20	14 TUESDA	Ý		ب ی	• 🗘 14:4	3
	Wi-Fi	Bluetooth	C DND	الله المعالم المعالم المحالم ال Voice	Screen Off	Co Enabled	
	Media Cha The phone	annel: is busy now.		-•			
Notification			System Settings				

Figure 42: Switch Audio Channel during Call

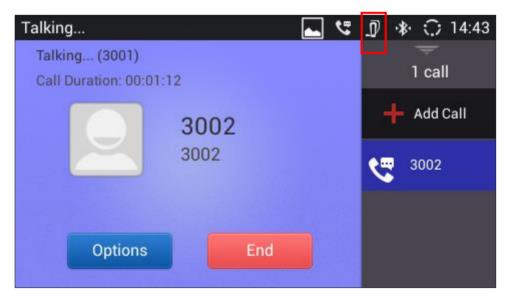


Figure 43: Switch Audio Channel during Call - Connected



CALL TRANSFER

A call can be transferred to another party during the call. The GXV3240 supports blind transfer and attended transfer.

BLIND TRANSFER

- 1. During the active call, press TRANSFER button **2** to bring up the transfer screen;
- 2. Select transfer mode as "Blind" by tapping on the highlight button in the figure below. The default transfer mode is "Blind";
- 3. Enter the transfer target number and then press the "Send" soft key on the right;
- 4. The call will be transferred and GXV3240 will hang up the call.







ATTENDED TRANSFER

GXV3240 supports attended transfer:

Firmware Version 1.0.3.62



- 1. During the active call, press TRANSFER button **2** to bring up the transfer screen;
- 2. Select transfer mode as "Attended" by tapping on the mode selection bar (see figure below);

Talking	ETP 4)	16:40
Blind		Send
Blind		
Attended		
call as the transfer target		

Figure 45: Attended Transfer

- 3. Enter the transfer target number, and then press the "Send" soft key on the right;
- 4. Before transfer target answers the call, GXV3240 hears the ringback tone and the touch screen prompts as below. Users could tap on "Cancel" to cancel the transfer, tap on "End" or simply hang up the call to complete call transfer;

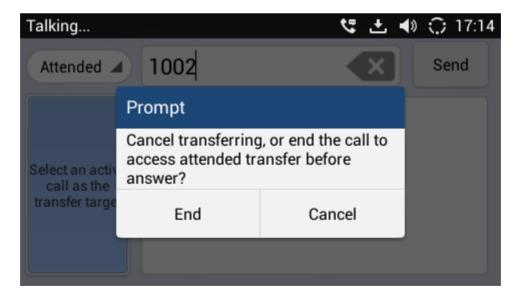


Figure 46: Attended Transfer - Transferring



5. After transfer target answers the call, the following screen will be shown up. If the user simply hangs up, taps on "End" or taps on the "Transfer" soft key, the call wil be transferred, and GXV3240 will hang up the call. If the user taps on "Split" soft key to separate the calls, the user will talk to the second established call while the first call is on hold.

Talking			⊾ 🥲 土 י	🌒 💭 17:14
Attended	1002		×	Send
	Prompt			
Select an activ call as the transfer targe	Split the call attended tra	l, or end the ca nsfer?	all to access	
	Transfer	End	Split	

Figure 47: Attended Transfer - Split

- 6. Besides attended transfers above, users could also consult the third party first before transferring the call.
 - 1) During the active call, tap **+** Add Call on the right panel to make the second call. This will place the current call on hold;
 - 2) The second call establishes after the call is answered;
 - 3) Press TRANSFER button (2.2) to bring up transfer screen. The first call on hold will be displayed



- 4) Select transfer mode as "Attended" in the transfer screen and tap on button such as to transfer the call;
- 5) The call will be transferred, and GXV3240 will hang up the call.



Talking		۳ 🎔	٩,	16:38
Blind 🔺		×		Send
Blind				
Attended	Ben			
call as the transfer target				

Figure 48: Attended Transfer

⚠ _{Note:}

- To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains;
- If users would like to cancel the transfer, press 🗩 button to go back to the previous talking screen.



6-WAY CONFERENCE

The GXV3240 supports up to 6-way conferencing on current firmware version 1.0.1.29.

INITIATE CONFERENCE

- 1. When the phone is in idle, call screen, or during an active call, press CONFERENCE button to bring up conference screen; users could also press CONF button in call screen right after off hook the phone;
 - Conf Monitor Video Control Display Mode + Conf Monitor Monitor Add Call Monitor Mo Call Mode Monitor Mo Call
- 2. Tap on to start adding party in conference;

Figure 49: GXV3240 Conference Screen

3. Enter the number of the party and tap on "INVITE" to add it to the conference.



Add Member			🌒 🤿 03:37
IPVideo 1	8125533	×	Invite
Select an active call to join the conference.			

Figure 50: GXV3240 Conference - Add New Call to the Conference

If there is other call on the GXV3240, it will show up when adding member to the conference. Users could then tap on the call to add it to the conference.



Figure 51: GXV3240 Conference - Add Existing Call to Conference

4. Repeat the above step to add more parties in. The following figure shows a 4-way conference established.



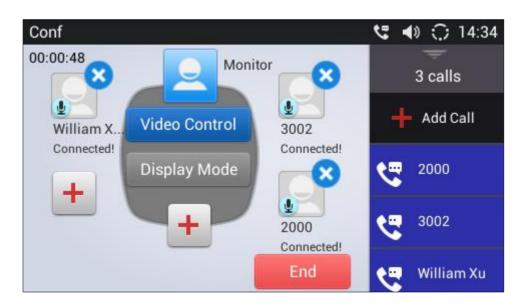


Figure 52: 4-way Conference Call Established

REMOVE PARTY FROM CONFERENCE

To remove a party from the conference, tap Son the right top corner for the corresponding party. This party will be disconnected from the conference.

END CONFERENCE

To end the conference, tap on to disconnect all the parties from the conference. GXV3240 will hang up the call. If the remote party hangs up the call itself, it will be disconnected from the conference but other parties on GXV3240 will stay in the existed conference.

HOLD AND RESUME CONFERENCE

During the conference, users could press the HOLD button **II** to hold or resume the conference at any time.

AUTO CONFERENCE MODE

The GXV3240 also supports "Auto Conference" which allows users to establish conference call in a quick and easy way, instead of adding the other parties one by one. To enable Auto Conference feature, go to web GUI->Advanced Settings->Call Features and set "Auto Conference" to "Yes". To esablish call with



auto conference when there are 1 or more calls on the GXV3240, simply press the conference button

and all the calls on GXV3240 will be brought into the conference.

▲ Note:

During the conference, if the initiator of the conference hangs up, the conference will end. If users wish to allow the remaining parties to stay in conversation after the initiator hangs up, the conference initiator should set "Transfer on 3-way Conference Hang up" to "Yes" in web GUI->Account page->Call Settings. This would allow the remaining parties to stay in the conference after the initiator exists the conference.



MISSED CALL

Misse	d Call		⊾ 🗘 16:11
		You have 1 missed call(s)	\times
\$	1000 10001002		16:11

When there is a missed call, the LCD will show missed call screen instead of regular idle screen.

Figure 53: Missed Call Screen

Users can tap on the one of missed call entry to access the missed call log. To close the missed call screen

and return to the idle screen, tap $\stackrel{\bigotimes}{\simeq}$ on the upper right.

Note: Users may also disable the prompt for missed calls on web UI. Users may go to web UI -> Account -> Call Settings -> Call Log, users need to choose "Don't Prompt Missed Call" to disable the prompt for missed call logs.

DND (DO NOT DISTURB)

When DND is on, the incoming calls to the GXV3240 will be blocked for all registered accounts with a reminder ring produced.

To turn on/off DND:

- 1. Touch and drag the status bar down on the GXV3240 idle screen. Then tap on "System Settings".
- 2. Tap on the DND icon ^L to turn it on. The status bar shows icon ² indicating DND is on.
- 3. Tap on the DND icon \checkmark to turn if off.



(îr:	*	C	()		0
Wi-Fi	Bluetooth	DND	Voice	Screen Off	Enabled
-					
. ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			-0		
	annel: 🔿 🛛 🖡	J9 Heads			

Figure 54: Enable/Disable DND

⚠ _{Note:}

- When the phone is in an active call, turning on/off DND won't affect the current active call. It will take effect starting from the next incoming call.
- When the DND is on, all the incoming call logs will be saved in Blacklist. They won't be saved in Call History.

VOICEMAIL/MESSAGE WAITING INDICATION

When there is a new voicemail, the Message Waiting Indication (MWI) LED icon will blink in red on the

upper right corner of the GXV3240 and 📟 will show up in the status bar.

To retrieve the voicemail:

- 1. Press the Message button and voicemail screen will show up, with all the registered accounts and the number of voicemails displayed.
- 2. Tap on the account to dial into the voicemail box. Then follow the Interactive Voice Response (IVR) for the message retrieval process.



📟 🕴 🤶 00:48
IPVideoTalk(<mark>0</mark> /0) 8163003

Figure 55: Retrieve Voicemail

For each account, the Voicemail User ID can be set up under web GUI->Account X->General Settings: "Voice Mail UserID". This is the number that will be dialed out to access voicemail message when tapping on the account in Voice Mail screen.

CALL FORWARD

Call forward feature can be set up from GXV3240 LCD or web GUI.

• From LCD

Go to onscreen Menu->Settings->Personalized Account->Select account name and tap on Call Forwarding to activate the feature. Then a list of options will show. Select the option to configure the call forward type (None, Unconditional, Time Based, Others) and then enter necessary number in the fields.

• From Web GUI

Log in GXV3240 web GUI and go to **Account** page->**Call Settings**. By default, Call Forward feature is set to "None". The Call Forward feature options are:

Unconditional Forward: All the incoming calls will be forwarded to the number set up in "All To" field.



Call Forward Type :	Unconditional
All To :	23455432

Figure 56: Call Forward - Unconditional

Time Based Forward: All the incoming calls will be forwarded to the number as schedule in the time period. During the setup time, the call will be forwarded to the number in "In Time Forward To:" field. Other period the call will be forwarded to the number in "Out Time Forward To:" field.

Call Forward Type :	Time Based	V
Time Period :	9:00 ~ 17:00	
In Time Forward To :	1234567	
Out Time Forward To :	1122331	

Figure 57: Call Forward - Time Based

Call Forward on Busy / Call Forward No Answer: The incoming call will be forwarded when the GXV3240 is busy or no answer after certain interval "Delayed Call Forward Wait Time (s)".

Call Forward	
Call Forward Type :	Others
Enable Busy Forward :	□ Yes
Busy To :	
Enable No Answer Forward :	□ Yes
No Answer To :	
No Answer Timeout (s) :	20

Figure 58: Call Forward - Busy/No Answer



MULTI-PURPOSE KEYS

The GXV3240 supports multi-purpose keys (MPK) without extension board (GXP2200EXT) by downloading MPK app from GS Market. After downloading the MPK app, users could configure the MPK from MPK

settings via LCD Menu->MPK app, or via web GUI->Advanced Settings->MPK LCD Settings.

To configure MPK via MPK app on the GXV3240:

- 1. Download MPK app from GS Market and install it to the GXV3240.
- 2. Open the MPK app. Tap on the upper right of the app and then tap on to start adding MPK numbers.

Add number			🛌 🎫 🦙 03:50
×	Cancel		🗸 ок
Key Mode	Speed Dia		
Number List			
	Name	Number	Account
			4001 🖌 🛟

Figure 59: GXV3240 MPK APP - Add Number

3. For the number list, users could manually enter it or select number from Contacts to add it.



Choose	e number	💽 🜵 💭 18:08
	🗙 Cancel	🗸 ОК(1)
1	Albert	
	Mobile:3514	, ė
В		Ģ
AL-	Ben	
	Mobile:3536	
J		- B
-	john	Ť.
	Mobile:3546	Ý.
L		Z

Figure 60: GXV3240 MPK APP - Add Number from Contacts

4. The added number will show in the list as the figure shows below.

Numbe	r List		🛛 🔄 🌵 💭 18:08
-5	john 3546	Speed Dial	
St	lily 3000	Speed Dial	
A	Ben 3536	Speed Dial	Image: Second

Figure 61: GXV3240 MPK APP - Number List



SHARED CALL APPEARANCE (SCA)

The GXV3240 supports shared call appearance by Broadsoft standard. This feature allows members of the SCA group to shared SIP lines and provides status monitoring (idle, active, progressing, hold) of the shared line. When there is an incoming call designated for the SCA group, all of the members of the group will be notified of an incoming call and will be able to answer the call from the phone with the SCA extension registered.

All the users that belong to the same SCA group will be notified by visual indicator when a user seizes the line and places an outgoing call, and all the users of this group will not be able to seize the line until the line goes back to an idle state or when the call is placed on hold (with the exception of when multiple call appearances are enabled on the server side).

In the middle of the conversation, there are two types of hold: Public Hold and Private Hold. When a member of the group places the call on public hold, the other users of the SCA group will be notified of this by the yellow-flashing button and they will be able to resume the call from their phone by pressing the line button. However, if this call is placed on private-hold, no other member of the SCA group will be able to resume that call.

To enable shared call appearance, the user would need to register the shared line account on the phone. In addition, they would need to enable SCA and configure SCA options via LCD or web GUI.

To configure SCA via LCD, go to **Settings->Personalized Account** and select one account first. The tap on "Shared Call Appearance (SCA)" to turn it on.

Shared Call Appear	🛌 師 🤶 03:56
Shared Call Appearance(SCA)	ON
Enable Barge-in	ON
Autofill CallPark Service Code	ON
Call Park Service Code:	Not configured
Seize Line Timeout(Secs):	15

Figure 62: GXV3240 SCA Settings on LCD



To configure SCA via web GUI, go to **Account** page->**SIP Settings** to fill out the options in the following figure.

Enable SCA (Shared Call Appearance) :	∏ Yes
Enable Bargeln :	□ Yes
Auto-filling Pickup Feature Code :	₩ Yes
Pickup Feature Code :	
Line-seize Timeout :	15
	Save Cancel

Figure 63: GXV3240 SCA Settings on Web UI

For more information about SCA configuration and function, please refer to the link below: http://www.grandstream.com/products/gxp_series/general/documents/gs_sca_guide.pdf



CALL FEATURES

The GXV3240 supports traditional and advanced telephony features including caller ID, caller ID with caller Name, call waiting, call forward and etc. Before using the following feature code, please make sure "Enable Call Features" option is set to "Yes" under web GUI->**Account** page->**Call Settings**.

Table 8: GXV3240 Feature Code

*01	 Use Preferred Codec (per call) Dial *01 followed by the preferred codec code and the phone number. The phone will try to use this codec during the call. Codec code: PCMU: 7110 PCMA: 7111 G726-32: 72632 G722: 722 iLBC: 7201 For example, if the user would like to use PCMA as the preferred codec to call phone number 334455, enter *017111334455.
*02	 Force Codec (per call) Dial *02 followed by the preferred codec code and the phone number. The phone will be forced to use this codec during the call. Codec code: PCMU: 7110 PCMA: 7111 G726-32: 72632 G722: 722 iLBC: 7201 For example, if the user would like to use PCMA to call phone number 334455, enter *017111334455.
*16	 Force enable SRTP Dial *16.
*17	 Disable SRTP Dial *17.
*18	 Enable SRTP (per call) Dial *18.
*19	Disable SRTP (per call)Dial *19.



*30	 Block Caller ID (for all subsequent calls) Dial *30.
*31	 Send Caller ID (for all subsequent calls) Dial *31.
*50	 Enable Call Waiting Dial *50.
*51	 Disable Call Waiting Dial *51.
*67	 Block Caller ID (per call) Dial *67 followed by the phone number.
*82	 Send Caller ID (per call) Dial *82 followed by the phone number.
*70	 Disable Call Waiting (per Call) Dial *70 followed by the phone number.
*71	 Enable Call Waiting (per Call) Dial *71 followed by the phone number.
*72	 Unconditional Call Forward. To set up unconditional call forward: Dial *72 followed by the phone number to forward the call.
*73	 Cancel Unconditional Call Forward. To cancel the unconditional call forward: Dial *73.
*74	 Paging Call Dial *74 followed by the phone number to send the paging call.
*83	 Force Audio Calling (per call) Dial *83 followed by the phone number to send the audio call.
*84	 Force Video Calling (per call) Dial *84 followed by the phone number to send the video call.
*90	 Busy Call Forward. To set up busy call forward: Dial *90 followed by the phone number to forward the call.
*91	 Cancel Busy Call Forward. To cancel the busy call forward: Dial *91.



*92	 Delayed Call Forward. To set up delayed call forward: Dial *92 followed by the number to forward the call. The default timeout before the call is forwarded is 20 seconds.
*93	 Cancel Delayed Call Forward. To cancel the delayed call forward: Dial *93.



This page intentionally left blank




CONTACTS

Users can manage contacts by adding, deleting and modifying single contacts, downloading contacts from HTTP/TFTP server, importing contacts from external storage and exporting contacts to external storage.

There are three ways to access GXV3240 contacts:

- On the keypad, press button.
- On the phone's idle screen or menu, open Contacts app by tapping on icon



The following figure shows main page of Contacts on the GXV3240.

Contacts	3	਼	13:55
Conta	acts		
£	Local Contacts		
2	LDAP Contacts		
L BX	BS Contacts		

Figure 64: GXV3240 Main Page of Contacts

Tap the icon to access the main page of Contacts. The LDAP Contacts includes the contacts in specific LDAP server, and BS Contacts includes the BroadWorks Xsi Contacts. They need to be configured with the remote LDAP server or BroadWorks server to enable these features.

Note: Users could set the "Phonebook Key Function" on phone's Web UI -> **Maintenance** -> **Contacts**. Users could set the phonebook key to "**Default**", "**LDAP Search**", "**Local Phonebook**", "**Local Group**", and "**BroadSoft Phonebook**".



LOCAL CONTACTS

Users can manage contacts by adding, deleting and modifying single contacts, downloading contacts from HTTP/TFTP server, importing contacts from external storage and exporting contacts to external storage.

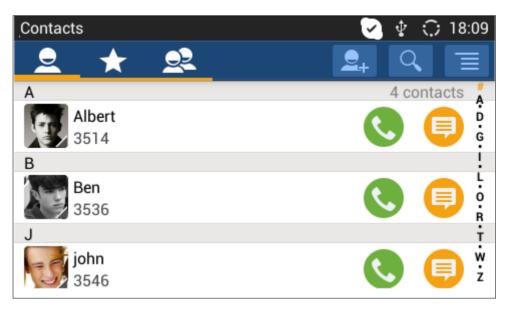


Figure 65: GXV3240 Local Contacts

On the upper left of the Contacts screen, users can tap on the icon to access three different categories in the contacts:

- All contacts.
 Favorite Contacts
 - Groups

ADD SINGLE CONTACTS

- 1. Tap on 🛃 to access all contacts.
- Tap on to bring up "New Contact" dialog to manually add a new contact. See [Figure 66: GXV3240
 Contacts Add New Contact].
- 3. Enter First name, Last name, Phone number and other information for the new contacts. Please make sure the account number field is selected so the GXV3240 will use this account to dial out the new contact. The account number field is located on the left of the "Phone" filed as highlighted below.



New Contac	ct	19:30
>	🗙 Cancel 🛛 🗸 C	ж
Tablet-or	nly, unsynced contact	1
	First name Last name	*
Phone	Mobile 🔺 3001 🖌 Pho	one
Email	Home 🖌 Email	

Figure 66: GXV3240 Contacts - Add New Contact

IMPORT/EXPORT CONTACTS

If the users have the GXV3240 phonebook file saved in local storage or external storage device that has been plugged into the GXV3240, the phonebook file can be directly imported to the Contacts. There are three different formats supported for the phonebook file: "csv", "vcard", and "xml". Users could manually create contacts first and export the phonebook file in csv, vcard or xml format to take a look on the phonebook file.

To import contacts:

- 1. Open Contacts.
- 2. Tap e on the upper right of the Contacts screen.
- 3. Select "Import" to bring up "Import Contacts" dialog.



Import Contacts	⊾ 🎫 🛜 04:02
🗙 Cancel	🗸 ок
Delete the History	OFF
Replace duplicate entries	ON
File encoding	UTF-8
File Type	xml 🔺

Figure 67: GXV3240 Contacts - Import Contacts

- 4. Fill in the import options and scroll down to the bottom of the screen.
- 5. Tap on "Select the file" to import phonebook file from the directory in internal or external storage device.

To export contacts:

- 1. Open Contacts.
- 2. Tap is on the upper right of the Contacts screen.
- 3. Select "Export" to bring up "Export Contacts" dialog.

Export Contacts	🛌 🎫 🤶 04:04
🗙 Cancel	🗸 ок
File encoding	UTF-8
File Type	xml 🔺
Choose Directory	/mnt/sdcard

Figure 68: GXV3240 Contacts - Export Contacts



- 4. Select the file encoding and file type for the exported phonebook file. By default, the GXV3240 is using "UTF-8" as the encoding method.
- 5. Tap on "Choose Directory" and select the directory where the phonebook file will be exported to.

DOWNLOAD CONTACTS

The GXV3240 supports downloading XML phonebook from a remote HTTP/TFTP server to local Contacts. When downloading the phonebook, the GXV3240 sends request to the HTTP/TFTP server looking for file **phonebook.xml**. For more details about GXV3240 phonebook, please refer to the following link:

http://www.grandstream.com/products/gxv_series/gxv3240/documents/gxv3240_xml_phonebook_guide.p df

To download phonebook:

- 1. Make sure the GXV3240 can connect to the HTTP/TFTP server and the phonebook.xml file in correct format is downloadable from the HTTP/TFTP server.
- 2. Open Contacts.
- 3. Tap = on the upper right of the Contacts screen.
- 4. Select "Download" to bring up the "Download Contacts" dialog.

Download Contacts	🛌 🎫 🤶 04:06
🗙 Cancel 🛛 🗸 Save	🛨 Download Now
Delete the History	ON
Replace duplicate entries	ON
Download Mode	http 🖌
File encoding	UTF-8

Figure 69: GXV3240 Contacts - Download Contacts

5. Fill in the necessary options and then tap on "Download Now". The GXV3240 will send out request to the configured HTTP/TFTP server.



SEARCH CONTACTS

- 1. Open Contacts.
- 2. Select or to open the contact list where you would like to search.
- 3. Tap ____ on the upper right to bring up search dialog.
- 4. Enter contact's name or number to search. The search result will be automatically updated and displayed when entering the key words.

USE CONTACTS

Once the contacts are added, users could navigate in the contacts list to make a call, send message and manage the contacts further more.

MAKE A CALL TO CONTACTS

Scroll up/down to find the contact in the list and tap on 🕓 to call this contact.

SEND SMS MESSAGE TO CONTACTS

Scroll up/down to find the contact in the list and tap on \bigcirc to call this contact.

SELECT CONTACTS

- 1. Scroll up/down to find the contact in the list.
- 2. Touching and pressing on the contact for about 2 seconds until the checkbox shows up.
- 3. Tap on the checkbox for the contacts to be selected.



Contacts	Ŷ	\odot	17:	10
1 Selected	Ū	i	Ξ	
А	4 co	ntac	cts	#
Amy 1006		•		D.G.
D				!
Daniel 1005			2	L.O.R
E				R T W
Emily 1004		V		w ż



ADD CONTACTS TO FAVORITES

- 1. Select the contact to be added as described in [SELECT CONTACTS].
- 2. Tap on and select "Add to favourites".

Contacts	🛌 🜵 🗘 17:10		
1 Selected			
A	Add to favourites		
Amy 1006	Edit		
D	Send to desktop		
Daniel 1005	Send		
E	Add to Blacklist		
Emily 1004	w ż		

Figure 71: GXV3240 Contacts - Contacts Options

There are another 2 methods to add contacts to favorites.



• When adding or editing single contact, tap on 📩 to add the contact to favorite.

or

• Tap on to navigate to favorite category. Then tap on to select the contacts to be added to favorites.

Edit Favouri	te Cont			Ψ	🗘 17:12
>	🕻 Cancel		~	ок	
Check the Co	ntacts will add to	the favourites list			
Am 100					
Dar 100					
E					
Emi 100					
В					



EDIT CONTACTS

- 1. Select the contact as described in [SELECT CONTACTS].
- 2. Tap on to edit the contacts.

SEND CONTACTS TO DESKTOP SHORTCUT

- 1. Select the contact as described in [SELECT CONTACTS].
- 2. Tap on and select "Send to desktop". A shortcut for this contact will be created on the idle screen for the users to access.



SHARE CONTACTS VIA BLUETOOTH

- 1. Select the contact as described in [SELECT CONTACTS].
- 2. Tap on and select "Send". Users will be able to send this contact to the connected Bluetooth device with the GXV3240.

ADD CONTACTS TO BLACKLIST

- 1. Select the contact as described in [SELECT CONTACTS].
- 2. Tap on and select "Add to Blacklist".

ADD GROUP

Open Contacts and tap on Relation to access group. To add a new group, tap on and select the existing contacts to the group.

New Gr	oup		📥 🌵	🗘 17:12
	🗙 Cancel		🗸 ок	
2	Group name	Ringtone	None	
Check t	he contacts will add to the gr	oup		
А				
E.	Amy 1006			
D				
	Daniel 1005			

Figure 73: GXV3240 Contacts - Add New Group

⚠ _{Note:}

- Users could also select group for the contact when adding or editing the contact.
- Ringtone can be assigned in group as well as single contact. If the group has ringtone set to "Custom Ringtone", this ring tone has the highest priority when there is a incoming call to the contact.



CONTACTS STORAGE STATUS

The GXV3240 default maximum contacts storage is up to 1000 entries. To check contact storage status,

tap on 📃 to bring up contacts options and select "Storage Status".

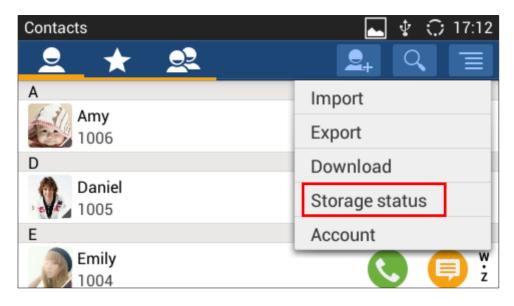


Figure 74: GXV3240 Contacts - Contact Options

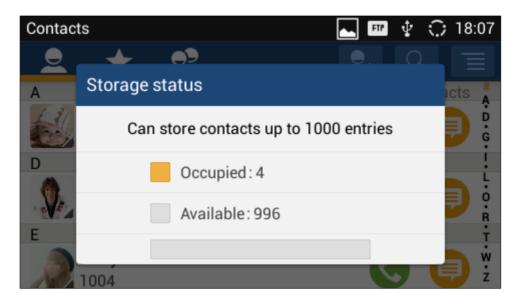


Figure 75: GXV3240 Contacts - Storage Status

Note: Users could increase the number of maximum contacts storage to more than 1000 contacts on GXV3240/3275. Users may access the phone through telnet, and change the P value P1688 to another number



(<=10000) to increase the default contacts storage. In this case, if users increase this default P value, the phone resource will be cost, and the phone performance will be slower.

ADD ACCOUNT TO SYNC UP CONTACTS

On the GXV3240, users could add 3rd party application account (e.g., Gmail, Microsoft Lync, Skype, and etc.) so that the contacts there could be added to the GXV3240.

To add 3rd party application account:

- 1. Make sure the 3rd party application is installed successfully. For example, install Skype from GS market if you would like to add Skype account's contacts to the GXV3240.
- 2. Open contacts.
- 3. Tap on to bring up contacts options and select "Account".

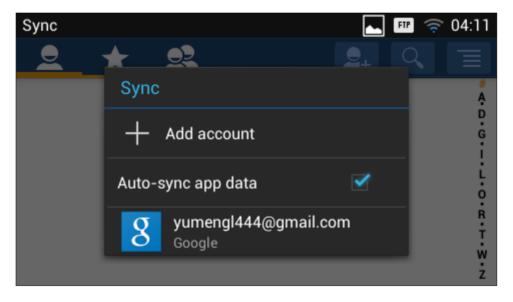


Figure 76: GXV3240 Contacts Options- Account

- 4. An installation wizard will guide the user to set up the account to sync the contacts step by step. Tap on "Add account" if there is no logged-in account set up on the GXV3240 yet.
- 5. The following figures describe adding a Google account for sync-up purpose. Tap on "Google" to add a Google account.



Add an ac	count		FTP	<pre></pre>
-	Corporate			
\sim	Email			
8	Google			

Figure 77: Add Account to Sync up in Contact

6. Follow the wizard and select "Existing" or "New" for the Google account.

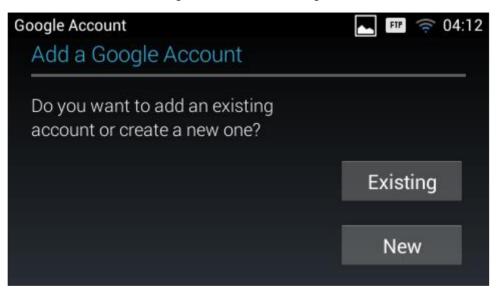


Figure 78: Add Google Account to Sync up in Contact

If users select "Existing", sign in with the Email address and password to complete the setup.



Type Email and Pa	FIP 🤶 04:13
Sign in	
Email	
Password	



LDAP BOOK

In addition to local contacts, the GXV3240 also supports LDAP book if LDAP server is available within the network. Please refer to the following link for more details about how to use LDAP book on the GXV3240:

http://www.grandstream.com/products/gxv_series/gxv3240/documents/gxv3240_ldap_book_guide.pdf

BROADWORKS XSI CONTACTS

Besides the Local and LDAP phonebook, the GXV3240 also supports BroadWorks Xsi contacts if BroadWorks XSP server is available within the network. Please refer to the following link for more details about how to use BroadWorks Xsi Contacts on the GXV3240:

http://www.grandstream.com/products/gxv_series/general/documents/gxv32xx_broadworks_xsi_guide.pdf



This page intentionally left blank



BLACKLIST

The GXV3240 has blacklist support for users to manage incoming calls. To access blacklist, tap on icon

in the phone's menu.

BLOCK HISTORY

Open blacklist and tap on to view the block history. It shows the detailed information for the blocked calls: caller number, caller name and calling time.

RESTORE BLOCKED NUMBER

The blocked number in the block history can be restored to call history and the number will be removed from blacklist. To do this:

- 1. In the block history, touch and press the entry for about 2 seconds until checkbox displays.
- 2. Tap on the checkbox for the entries to be selected, and *indicates the entry is selected*.
- 3. Tap on 📃 and select "Restore to Call History".

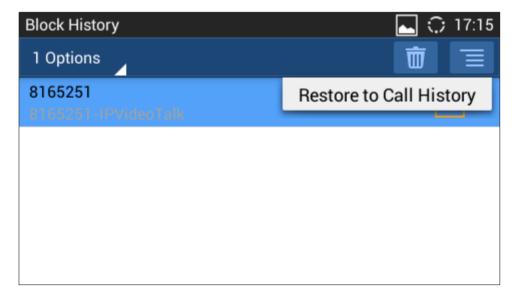


Figure 80: Restore Blocked Number



4. A dialog will pop up for users to confirm. Tap on OK to restore this number to call history and the number will be removed from blacklist.

DELETE BLOCK HISTORY

- 1. In the block history, touch and press the entry for about 2 seconds until checkbox displays.
- 2. Tap on the checkbox for the entries to be selected, and *indicates the entry is selected*.
- 3. Tap on to delete the selected entries.

Users could also tap on uirectly to clear all block history logs.

EDIT BLACKLIST

Tap on and users will see all the blacklist numbers.

ADD BLACKLIST

1. Tap on to start adding new entry to the blacklist. The blacklist can be added manually, add from contacts, or added from call history.

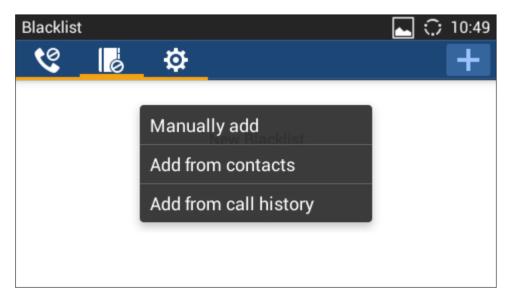


Figure 81: GXV3240 Blacklist - Add Blacklist

2. The following figure shows manually adding number to blacklist. Once Manually add option is selected,



a window will be prompted for users to enter the phone number in the first field and name/other note information in the second field (optional). Tap on **Save** to finish the adding operation.

Blacklist			FTP 🛌] 🗘	11:00
%	to to				+
	Add number to b	lacklist			
	Enter phone r	number)		
	Note (optiona	Note (optional)			
	Cancel	Save			

Figure 82: Manually Add Number to Blacklist

EDIT BLACKLIST

- 1. In the blacklist, touch and press the entry for about 2 seconds until checkbox displays.
- 2. Tap on to edit the blacklist.
- 3. Tap on OK once done.

Blacklist	🛌 🎟 🗘 11:03
1 Options	💉 🛅
John 523644	\mathbf{N}
Amy 562333	

Figure 83: Edit Entry from Blacklist



This page intentionally left blank



DELETE BLACKLIST

- 1. In the blacklist, touch and press the entry for about 2 seconds until checkbox displays.
- 2. Tap on the checkbox for the entries to be selected, and *indicates the entry is selected*.
- 3. Tap on to delete the selected entries.

BLACKLIST SETTINGS

Tap on to access blacklist settings.

- **DND Mode**: Turn on/off DND mode. If turned on, all incoming calls will be rejected.
- **Block Mode**: Turn on/off Block Mode. If turned on, the **Block Options** will be activated so that the specific incoming calls will be blocked as defined in **Block Options**.
- Block Options: Select Block All, Block Blacklist Only, Block Anonymous or Block Anonymous And Blacklist. The option is valid only when Block Mode is on;
- Block Notification: Turn on/off Block Notification. If turned on, the block icon Swill be displayed in

the status bar after the phone blocks incoming calls. Users could touch and drag the status bar and tap on the block notification to view details.

• Time Settings: Set up the block schedule. Select Block 24 Hours or Modify Time by specifying the Starting Time and Ending Time.

Settings				FT	Ψ.	ि	18:03
•	6	ø	_				
DND M	ode						
DND M	ode				OFF		
Do no d	isturb				UFF		
Block N	lode						
Block N	lode					0	N
Block O	ptions	(Block Blacklist	t Only			

Figure 84: Blacklist Settings



This page intentionally left blank



CALL HISTORY

GXV3240 Call history provides users access to phone's call logs in different categories. Call history can be accessed in the following two ways:

- Tap on phone's menu or idle screen if call history shortcut is created on the desktop.
 Or
- Tap ^{VS} on the bottom of the idle screen or menu screen.
- GXV3240 supports local and BroadWorks Xsi call history.

The following figure shows main page of Call History on the GXV3240.

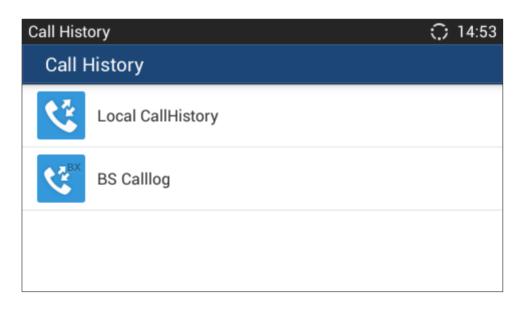


Figure 85: GXV3240 Main Page of Call History

LOCAL CALL HISTORY

Tap the Local CallHistory icon to enter the local call history.



CallHist	ory(11)		🌵 🗘 16:57
ধ্য	V V	\$	面
	⊎ Emily℃ 1004-1007		16:57 Duration 00:00
	 		16:56 Duration 00:03
	 		16:56 Duration 00:36
	里 Raymond★ 1007-1007		16:51 Duration 00:00

Figure 86: GXV3240 Call History

There are four different categories in the call history. Users could tap on the icon on the top menu to access the corresponding call logs:



DIAL OUT FROM CALL HISTORY

Tap on one of the call history entry to call this number directly. The phone will use the same account as the call log when dialing out.

CALL HISTORY OPTIONS

- Touch and press the call history entry for about 2 seconds until the checkbox displays.
- Then tap on 📃 to bring up the options. Users can edit this number before calling, add this number to contacts, add this number to balcklist and send text message to this number.



CallHistory(14)	🜵 🗘 17:21
1 Selected	
Daniel	Edit number before calling
• 🖗 😵 1005-1007	View contact
1004-1007	Add to Blacklist
Amy	Send text Message
Line 1006-1007 Classifier Raymond	
1007-1007	



DELETE CALL HISTORY

- Touch and press the call history entry for about 2 seconds until the checkbox displays.
- Tap on the checkbox to select the call history entries, and *indicates the entry is selected*.
- Tap on to delete the entries.

CALL HISTORY DETAILS

For each call history entry, users could tap \triangleright on the right side of the entry to access the details.



Detai	ls			🌵 🗘 19:26
-3	john 3546-3165		S .	
<u></u>	19:26	Duration	00:00	•
<u>•</u>	17:41	Duration	00:00	•
4	17:26	Duration	00:00	•
4	17:24	Duration	00:00	•

Figure 88: GXV3240 Call History - Details

The following operations could be done:

- Dial out this number directly.
- Bring up dial screen with the call history number. Users could edit the number before dialing out.
 - Delete the entry.
- Options "Clear all", "Add to Contacts", "Add to Blacklist", or "Send Text Message" for the number in this entry.

BROADWORKS XSI CALL HISTORY

Besides the Local Call History, the GXV3240 also supports BroadWorks Xsi call history if BroadWorks XSP server is available within the network. Please refer to the following link for more details about how to use BroadWorks Xsi Call History on the GXV3240:

http://www.grandstream.com/products/gxv_series/gxv3240/documents/gxv32xx_broadworks_xsi_guide.p df



SMS

The GXV3240 has built-in SMS application to send/receive message, if the SIP server supports SMS message.

Users can create, edit draft, delete and check the storage status of SMS. The SMS app supports up to 1000

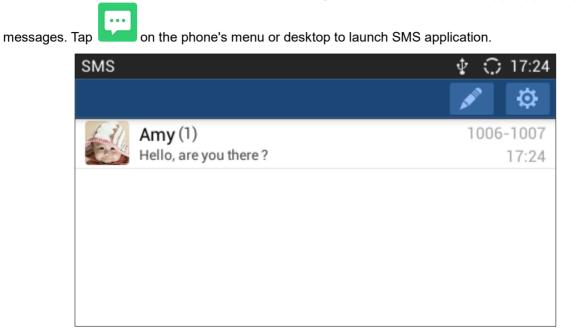


Figure 89: GXV3240 SMS Message

VIEW SMS

On the SMS list screen, tap on one of the message to view the SMS details.



SMS		🎟 🗘 17:17
33082 (4) 33082-33085		
	Send	OK! Hello
	Send OK! Do you	have one minute?
	17:17	
	Send OK!	Hi, Are you there?
		►

Figure 90: View SMS Dialog

CREATE NEW SMS

Tap on in SMS application to start composing a new message.

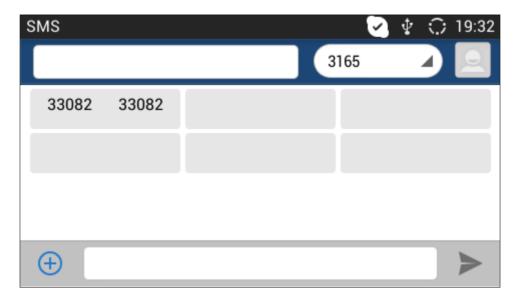


Figure 91: Create New Message

1. Select account to send the message from.

Select the account to send the SMS message in the drop down box on the right side of the top menu.



2. Add number to send the message to.

Enter the number of the contact to send the message too on the left side of the top menu. Users could

also select contact from GXV3240 Contacts by tapping on icon, select the account to send the SMS message in the drop down box on the right side of the top menu.

- Input content
 Enter the message content on the bottom field of the screen. Tap on "Done" once finished.
- 4. Send message

Tap on the arrow icon keep when you are ready to send the message out.

DELETE SMS

- 1. Touch and press one SMS message for about 2 seconds until the checkbox shows.
- Select the checkbox for the messages to be deleted. Users could also tap on ^{1 Selected} to select/unselect all message.
- 3. Tap on to delete the selected messages.



This page intentionally left blank



CALENDAR

In Calendar application, users could synchronize events from Google account as well as create, modify and view the events. The GXV3240 also provides notification for the upcoming events from the Calendar. Tap



SIGN IN CALENDAR

When launching the Calendar application for the first time, the users will be required to sign in with a Google account.

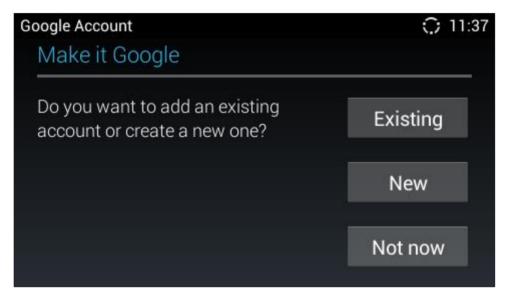


Figure 92: Sign In Calendar with Google Account

VIEW CALENDAR

Once signed in, tap on the upper left softkey in the Calender application to select different format to view the calendar. Users can select "Day" "Week" "Month" or "Agenda" from there.



Calendar					🗘 11:44
March 201	14			21 Toda	y 🖿
Day	March 1	WED	THU	FRI	SAT
Day	Marchin	26	27	28	1
Week	Feb 23 – Mar 1	5	6	7	8
		12	13	14	15
Month	March	19	20	21	22
Agenda	March 1	26	27	28	29
20	21 1	2	0	4	-

Figure 93: View Calendar

When viewing the calendar by month, the blue mark on the date indicates there is event scheduled on that day. Tapping on it can view the scheduled event.

Calendar						🗘 12:26
March	2014 🔺				21 Toda	y 🖿
SUN 16	MON 17	TUE 18	WED	тни 20	FRI 21	sat 22
23	24	25	26	27	28	1
2	3	4	5	6	7	8
9	10	11	12	13	1 4	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29

Figure 94: View Calendar by Month



Ca	alendar	🛌 🎫 🗘 12:54
F	RIDAY March 14, 2014 🖌	21 Today 🛯 🐂
00	Write a case plan.	
01	See my manager Office	
02		



CREATE EVENT

- 1. Tap on a date in the Calendar application to bring up the event list for that day.
- 2. On the upper right, tap on to create a new event.

Calendar	🎟 📐 🗘 12:37	Calendar	🛌 🎟 🞲 12:20
saturday March 1, 2014 🥒	21 Today 🛛 🗖	X CANCEL	DONE
00		yumengl444@gmail.com	
01		Event name	
		Location	
02		FROM Fri, Mar 14, 2014	▲ 02:00 ▲
02			



CALENDAR OPTIONS

In the Calendar application, press MENU button (I) to bring up calendar options. Users could refresh calendar, search events and synchronize calendar with Google account by tapping on "Settings".



This page intentionally left blank



EMAIL

GXV3240 provides built-in Email application for users to access personal or business Email account. Tap

on to launch Email application.

SIGN IN EMAIL

When launching the Email application for the first time, a wizard will be provided for users to set up the Email account step by step.

Account setup	⊾ 🎟 🧕 🗘 15:02
You can set up email for most few steps.	t accounts in just a
Email address	
Password	
Manual setup	Next

Figure 97: Sign In Email

- 1. Enter the Email address and Password.
- 2. Tap on "Next" for quick setup, or tap on "Manual setup" to manually configure more options.
- 3. If "Manual setup" is selected in step 2, users will choose the account type "POP3" "IMAP" or "EXCHANGE" depending on the type of your Email account.



Account setup		🎟 ⊾ 🗘	; 15:50
What type of account	is this?		
	POP3		
	IMAP		
	Exchange		

Figure 98: Select Email Account Type

• POP3 setup. When using POP3, the sent Emails are stored locally instead of the server side. Please check with your network administrators for the correct Email account settings for POP3.

Account setup	FTP	*	਼	20:29
POP3 server				
pop3.gmail.com				
Port				
995				
Security type				
SSL/TLS				
Delete email from server				
Never				

Figure 99: Email Account Type - POP3

• IMAP setup. When using IMAP, the Emails stay on the server side and users can see them from other devices as well. Please check with your network administrators for the correct Email account settings for IMAP.



Account setup	_	*	਼	20:29
IMAP server				
imap.gmail.com				
Port				
993				
Security type				
SSL/TLS				
IMAP path prefix				
Optional				

Figure 100: Email Account Type - IMAP

• EXCHANGE setup. When using EXCHANGE, all Emails are stored in the central Exchange mail server and can be checked using capable mail client such as Microsoft Outlook. Please check with your network administrators for the correct Email account settings for EXCHANGE.

Account setup	 !!!	* 🗘 20:29
gmail.com		
Use secure connection (SSL)		
Accept all SSL certificates		
Client certificate		Select
None		
Port		
443		
Mohile Device ID		

Figure 101: Email Account Type - EXCHANGE

4. If "Next" is selected in step 2, users will see the following default account settings. Tap on "Next" again.



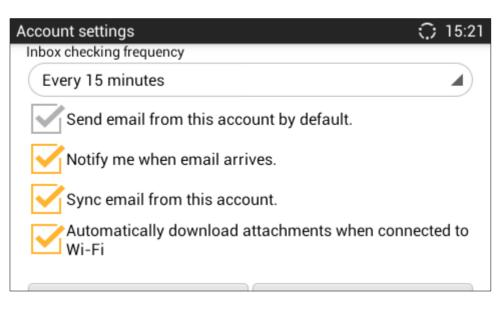


Figure 102: Email Account Settings

5. Set up "Your name" to be displayed on the outgoing messages and tap on "Next" again. Users should be able to start using the Email account now.



EMAIL OPTIONS

SEND EMAIL

Tap on 📕 to compose and send an Email.

SEARCH EMAIL

Tap on 🔍 to search Email.

EMAIL FOLDERS

Tap on to open up folders.

MULTIPLE EMAIL ACCOUNTS

Users could also add more than one Email account on the GXV3240. To do this, go to phone's Settings->Accounts, tap on "Add account" and select "Email". A new Email account setup wizard will show up for users to add the Email account.

Once another Email account is successfully added, users could tap on the account Email address on the upper left to switch between the Email accounts.

Email		\times [FIP	4 × ⊖	16:37
\sim	Inbox yumengl44@gmail.com	،20	1	Q,	
	F yumengl44@gmail.com	20			10:45
	^很 yumengl444@gmail.com	4	更多你的) 、电子邮件	朋友。 在 ‡联系人。	
	Combined view 2 accounts	24		r	Mar 20
	R Recent folders (yumeng		ng — Care ber, Every		*
	Drafts T	1		I	Mar 19
	Sent		w – Sear ention 30		

Figure 103: Multiple Email Accounts



This page intentionally left blank



GS MARKET

The GXV3240 supports extensive amount of 3rd party Android applications. Users could install those applications from the built-in GS Market. If Google Play application is installed from GS market, users could log in and download all kinds of applications there as well.

Tap on the phone's menu or desktop to launch the GS Market. Users could browse, search, download and install the apps from there for tools, games and other applications.

VIEW APPS

Open GS market and there are four different categories "HOT", "APP", "GAME" and "TOOLS". In the displayed applications, tap on one of the application and users will be able to see the details such as descriptions, publish date, version, rate, comments and etc.

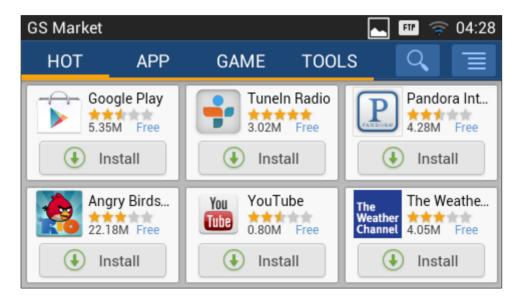


Figure 104: GXV3240 GS Market

SEARCH APPS

Open GS market and tap on . Input the key words for the app you are looking for.



DOWNLOAD AND INSTALL APPS

- 1. Open GS market and find the app you would like to install.
- 2. Tap on "Install" softkey for the app. It will start downloading.
- 3. Once downloaded, the installation process will start automatically.
- 4. Tap on **E** to view the downloaded apps and installed apps from GS market.

GS Mar	rket	Ŷ	\odot	19:53
DOW	NLOAD INSTALLED			t
	Google Play Version:3.9.17 Storage:5.35 M			
L	Lync 2013 Version:5.1.0000 Storage:15.73 M			
S	Skype Version:3.0.0.6181 Storage:14.53 M Can be	upda	ted	

Figure 105: GXV3240 GS Market - Downloaded Applications

UPDATE APPS

The GXV3240 will automatically detect if there is a new version available for the installed apps to upgrade when the network connection is available and stable. Users can also view update status and manually update the apps in GS Market.

To update apps, open GS Market and tap on to access the installed apps. User will see Update option for the app that has new version available.



GS Market	🕑 🌵	19:54
DOWNLOAD INSTALLED		t
Is installed 3 Apps. 1 can be updated.		
Skype Version:3.0.0.6181 Storage:14.53 M	(1) Update	() Uninstall
Version:3.9.17 Storage:5.35 M		() Uninstall
Lync 2013 Version:5.1.0000 Storage:15.73 M		() Uninstall

Figure 106: GXV3240 GS Market - Installed Applications

UNINSTALL APPS

- 1. Open GS Market and tap on **E** to access the installed apps.
- 2. User will see "Uninstall" option for each app. Tap on "Unstall" for the app you would like to unstall.
- 3. A confirmation dialog will pop out. Tap on "OK" to start uninstallation.

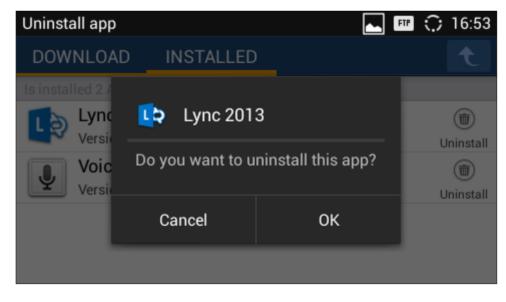


Figure 107: GXV3240 GS Market - Uninstall Applications



This page intentionally left blank



TOOLS

FILE MANAGER

File Manager is a tool that allows users to delete, move, copy/paste, send and rename files. It helps users to access and manage files in local storage as well as external storage devices (e.g., SD card/USB flash

drive). Tap — on the phone's menu or desktop to launch File Manager application.

COPY AND PASTE FILES

Follow the steps below to copy and paste a file on the GXV3240.

1. Open file manager and navigate to the directory of the file to be copied. Touch and press on the file for about 2 seconds until the checkbox shows up.

FileManager			🖞 😲 19:23
1 Options			
0925	123	20130905	20131026
20131026下午	201401231704 59.pcap	201402130000 00.jpeg	201402130000 01.jpeg

Figure 108: GXV3240 File Manager

2. Select the files or folders to be copied. Tap on

to select all files or unselect all files.

- 3. Tap on = and select "Copy". The file will be copied.
- 4. Tap on the root directory to go back to the root directory. Navigate to the destination folder where you would like to paste the file to.

Firmware Version 1.0.3.62



FileManager			ि	19:24
/ •				
sd Internal Storage	USB Disk	Screensaver		

Figure 109: File Manager Root Directory

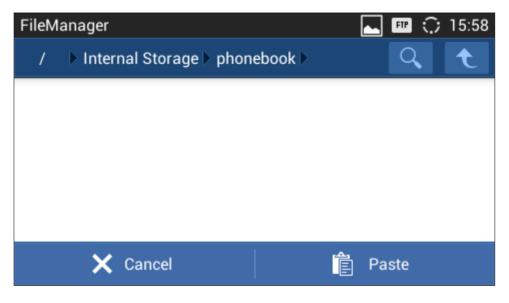


Figure 110: Paste File



MOVE FILES

The steps to move a file is similar to copy/paste a file. The difference is once the file is moved, the file will not be kept in the source folder. Follow the steps below to move a file on the GXV3240.

1. Open file manager and navigate to the directory of the file to be copied. Touch and press on the file for about 2 seconds until the checkbox shows up.

FileManager			🖞 😲 19:23
1 Options 🔺			
0925	123	20130905	20131026
20131026下午	201401231704 59.pcap	201402130000 00.jpeg	201402130000 01.jpeg


Figure 111: GXV3240 File Manager


- 2. Select the files or folders to be moved. Tap on **1 Options** to select all files or unselect all files.
- 3. Tap on 🧮 and select "Move". The file will be copied.
- 4. Tap on the root directory to go back to the root directory. Navigate to the destination folder where you would like to move the file to.



FileManager		- S -	Ŷ	਼	19:24
/					Ξ
Internal Storage	USB Disk	Screensaver			

Figure 112: File Manager Root Directory

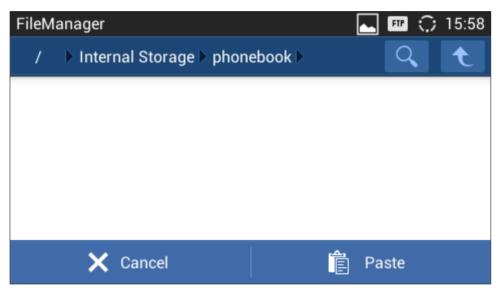



SEND FILES

The users can send a file via Bluetooth or other applications from file manager. Please make sure Bluetooth is turned on and connected to the Bluetooth devices, or the application are set up properly already. Otherwise, users will be directed to set it up before the file can be sent out.

To send a file:

1. Open file manager and navigate to the directory of the file to be sent over. Touch and press on the file for about 2 seconds until the checkbox shows up.



FileManager			🕴 😲 19:23
1 Options 🖌			
0925	123	20130905	20131026
20131026下午	201401231704 59.pcap	201402130000 00.jpeg	201402130000 01.jpeg

Figure 114: GXV3240 File Manager

- 2. Select the files or folders to be sent. Tap on 10 ptions to select all files or unselect all files.
- 3. Tap on and select "Send". A new dialog window will pop up for users to send the file via Bluetooth or other applications.

DELETE FILES

- 1. Open file manager and navigate to the directory of the file to be sent over. Touch and press on the file for about 2 seconds until the checkbox shows up.
- 2. Select the files or folders to be sent. Tap on **1 Options** to select all files or unselect all files.
- 3. Tap on icon. A confirmation dialog will pop up.
- 4. Tap on OK to delete the file(s).



FileManager		Ū	🕴 🗘 19:24
3 Options			te la
0925	Delete		20131026
0923	Are you sure to del	ete these 3 files?	
20131026下	Cancel	ок	1402130000
	59.pcap	00.jpeg	01.jpeg

Figure 115: Delete File(s) via File Manager

RENAME A FILE

- 1. Open file manager and navigate to the directory of the file to be sent over. Touch and press on the file for about 2 seconds until the checkbox shows up.
- 2. Tap on and select "Rename". A new dialog window will pop up for users to enter the new name.
- 3. Tap on OK.

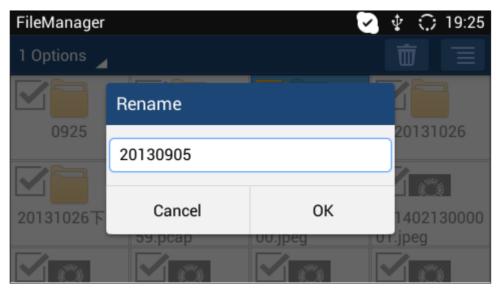


Figure 116: Rename File



⚠ _{Note:}

Under the File Manager root directory, screensaver is a system folder that users could not create or delete files/folders there.

FTP SERVER

The GXV3240 supports file transfer via FTP server. Once installed, users could access the GXV3240 file

system from PC. Tap for the phone's menu or desktop to open FTP Server application.

FTPServer	🛌 🤶 04:38
You can use FTP service to manage your f	iles via PC
Start FTP Server	\$

Figure 117: FTP Server - Start

Tap on "Start FTP Server" to turn the server on. The FTP server address URL will be provided on the screen.



FTPServer		🛌 🎫 🤝 04:38
	ftp://192.168.0.119:2121/	
	Stop FTP Server	\\$

Figure 118: FTP Server - Stop

For security purpose, users could also tap on the above figure to set up username, password, port number and directory for remote access. By default, when the users access the ftp server from a PC, a prompt will show asking for user name and password. The default user name and password are "admin".

FTPServer	🛌 🤿 04:39
Settings	
Enable username and password	OFF
Username and password	
Port Number	2121
Select Directory	Internal Storage 🔺

Figure 119: FTP Server - Settings



 \bigcirc

RECORDER

GXV3240 Recorder application allows users to record audio and access recording files from call recording.

There is no time limit on the recorder as long as there is enough space to save the recording file. Tap on the phone's menu or desktop to launch the Recorder application.

NORMAL RECORDER

Normal recorder shows the recording files recorded using the Recorder application.

Recorder		\sim	¥ :	ି	19:33
NORMAL	CALL	 (***	Q		Ξ
201402271933 19:33:12	07461	C	Durati	on (00:03
201402271932 19:32:51	44103	C	Ourati	on (00:07
201402271932 19:32:39	36909	C	Ourati	on (00:02

Figure 120: Normal Recorder

To use the recorder app to record audio, tap on even the recorder.

1. Tap on • to start recording.



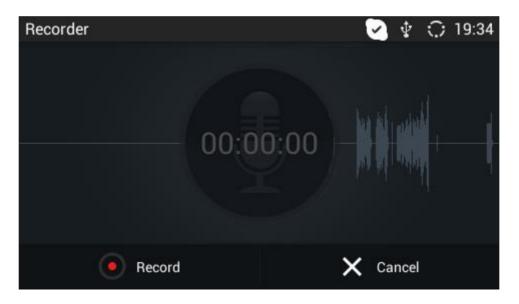


Figure 121: Normal Recorder - Start Recording

2. Tap on "Save" to end recording.

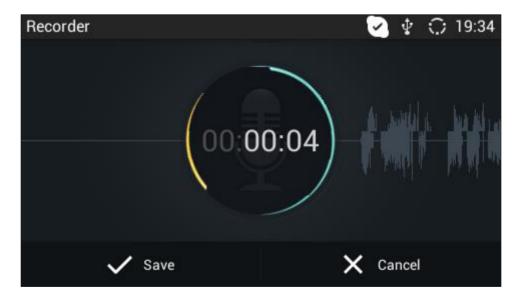


Figure 122: Normal Recorder - End Recording

3. The file will be saved and accessible under Recorder application "Normal" category. Tap on the recording file to play the recording.



CALL RECORDER

During an active call, users have the option to record the conversation. The recorded conversation can be retrieved here.

Talking	🥲 💷 📣 🔿 16:17	Recorder	୯ 📼 🛊 🗘 19:37
Talking (3165) Call Duration: 00:00:06	1 call	NORMAL CALL	C 2
Ben	+ Add Call	john 19:37:26	Duration 00:10
Start Recording 1536	3165 Ben		
Video On			
Options			

Figure 123: Call Recorder

DOWNLOADS



The Downloads application can be opened by tapping on the phone's menu or desktop. The files (such as PDF documents, pictures) downloaded from the browser will be stored in the internal storage and can be access from Downloads application.



Figure 124: Downloads

- Tap on the file to open it.
- Tap on the checkbox to select the file. Then users could delete or share the file.



• Tap on "Sort by size" or "Sort by date" to sort the downloaded files.

IP LOCATION

The IP Location application provides users with a tool to resolve the public IP address to the location. Tap

on the phone's menu or desktop to launch the IP Location application.

In the IP Location application, users could simply enter the public IP address and then tap on **Search** to view the result. Based on the IP address provided, the following information will be given: **Country**, **Region**, **City**, **Latitude**, **Longitude**, **Time Zone** and **Weather Code**. This information is useful when configuring the phone to provide personalized settings based on user's location.

IP Location			L 🗘 18:38
IP Address	67.	110.250.152	Search
Cou	intry	US	
Re	gion	CALIFORNIA	
	City	YORBA LINDA	
Lati	tude	33.888630	
Longi	tude	-117.813110	
Timez	zone	-07:00	
Weather C	Code	USCA1267	

Figure 125: GXV3240 Location

For example, in the above figure, the public IP address 67.110.250.152 is mapped to Yorba Linda in California, USA. The time zone is UTC-07:00 and the weather code is USA1267.



DIAGNOSIS

The GXV3240 provides a built-in diagnosis application for users to troubleshoot hardware issues related to

LCD, keypad, and touch screen, LED as well as extension board connection. Tap en on the phone's menu or desktop to launch Diagnosis application. The following figure shows the diagnosis menu. After selecting the option, users could follow the diagnosis instruction to troubleshoot the device.

LCD Diagnosis
LCD Off
Keypad Diagnosis
Touch Screen Diagnosis
LED Diagnosis
BLE Expansion Board Diagnosis

Figure 126: GXV3240 Diagnosis



This page intentionally left blank




CAMERA

The GXV3240 has built-in Camera to support taking pictures and recording videos. Users can also use the camera during SIP video calls as well as video calls via 3rd party applications such as Microsoft Lync. To

O.

access Camera to take pictures and videos, tap on Camera icon in the second sec

on the desktop or phone's menu.

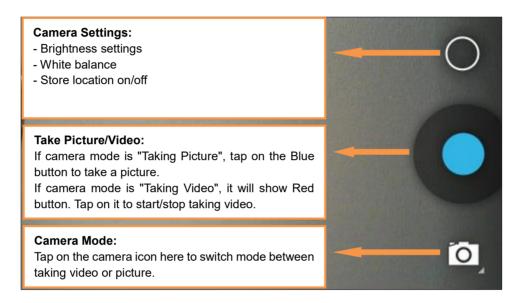



TAKE PICTURE

- 1. Select the camera mode as **O** to take picture.
- 2. Tap on the Blue button to take a picture.
- 3. The captured picture can be accessed under FileManager->Internal Storage->DCIM->Camera.

RECORD VIDEO

- 1. Select the camera mode as **t** to record video.
- 2. Tap on the Red button to start/stop recording.
- 3. The recorded video can be accessed under FileManager->Internal Storage->DCIM->Camera.

CAMERA SETTINGS

Firmware Version 1.0.3.62



Tap on icon 🔘 to bring up camera settings.

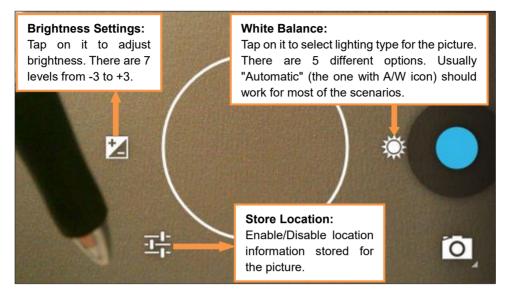


Figure 128: GXV3240 Camera Settings

ANGLE ADJUSTMENT

On the back of the GXV3240 camera, users could scroll the wheel up/down to adjust the camera angle. If

users scroll the camera all the way up until the icon Ω shows up on the status bar of the screen, the camera is turned off.



MULTIMEDIA

GALLERY

The GXV3240 has built-in Gallery application for users to take pictures/videos, view pictures and play videos from GXV3240 internal storage or USB/SD card storage. Users could also perform basic editing tasks on pictures and set them as wallpaper or picture for contacts. The pictures can be easily shared with friends in Gallery app by sending via Bluetooth and Email.

Tap on the

on the phone's menu or desktop to launch the gallery application on the GXV3240.

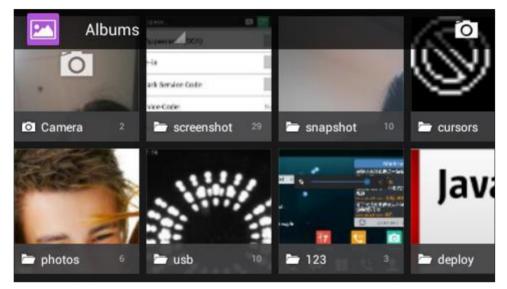


Figure 129: GXV3240 Gallery

• Gallery albums

The image related folders in the GXV3240 will be present in Gallery as thumbnails. Users can tap on the thumbnail to access the folder.

• View pictures

After accessing the album, slide left/right to view all the pictures. Users could select "Grid" or "Filmstrip" view mode to display the pictures. Tap on a specific picture to view the picture in full screen.

• Edit picture

When the picture is displayed in full screen, tap on the screen again. On the lower left corner, users



will see icon . Tap on it and users can crop/rotate/add effect to the picture.

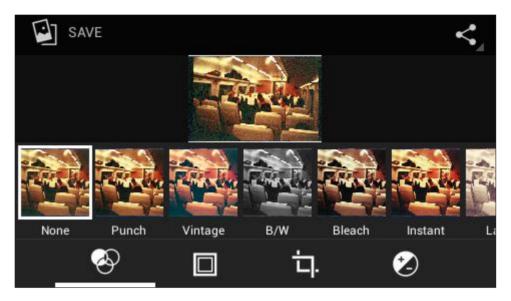


Figure 130: GXV3240 Gallery - Edit Picture

• Picture Options

When the picture is displayed in full screen, press the Menu button (E). A list of options will be available for users to select, including "Delete", "Edit", "Rotate", "Crop" or "Set Picture as" and etc.

all the second	Delete	
	Slideshow	
	Edit	
	Rotate left	7 0)
	Rotate right	
	Сгор	
	Set picture as	
	Details	Stream and

Figure 131: GXV3240 Gallery - Picture Options



• Take picture/video

Tap on the upper right of the Gallery to start taking pictures or videos using the GXV3240 built-in

camera. In the camera mode, users could tap **to** take video and tap **to** to take picture on the bottom right.

• Select multiple pictures

Touch and press on one of the pictures for about 2 seconds until the picture is highlighted. Tap on

other pictures to select multiple pictures. On the upper right of the Gallery app, users can tap

share the pictures, or tap 📋 to delete the selected pictures

• Share pictures

Tap Son the upper right of the picture to send the picture via Bluetooth or 3rd party applications.

MUSIC

The GXV3240 has built-in music player to support audio files in AAC, MP3, AMR, WAVE, MIDI and Vorbis

format. Tap **2** on the phone's menu or desktop to launch Music application.

PLAY MUSIC

- 1. Download music to have the music files ready in USB flash drive/SD card plugged into the GXV3240.
- 2. Open Music application.
- 3. Tap on and select "Refresh". The music files will be displayed in the list.



Songs	⊾ 🎟 🖂 🕴 🔸 🗘 18:29
<u>, 1</u> 1	<u> し へ ト 三 </u>
	Refresh
I knew you were trouble Unknown artist	Shuffle All
She Unknown artist	3:49
telephone Unknown artist	3:41
thousand miles	3:40

Figure 132: GXV3240 Music - Refresh Music List

4. Select a song and tap to play the song.

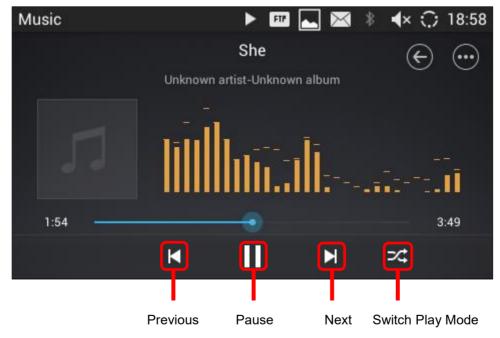


Figure 133: GXV3240 Music - Play a Song



EDIT MUSIC

- 1. In the music list, touch and press on one of the music file until the checkbox displays.
- 2. Tap on each and users will be able to "Play" the music, "Add To PlayList" and "Save As Ringtone".

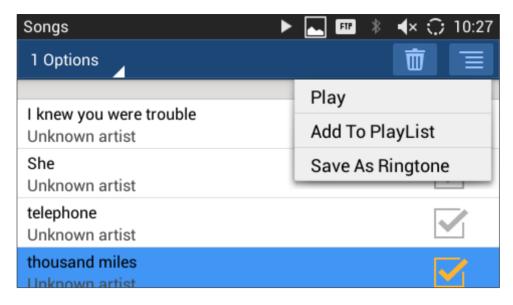


Figure 134: GXV3240 Music - Options

SORT MUSIC

On the top menu of the Music application, users can sort music by "Song", "Artist", "Album" and "Playlist".

Songs Artists Albums Playlists

Songs		FTP 🔀	*	. ≰× ;	🗘 18:43
	_	С	ζ.		
					4 song
I knew you were trouble Unknown artist					3:39
She					3:49
Unknown artist					0.40
telephone Unknown artist					3:41
thousand miles					3:40
Unknown artist					

Figure 135: GXV3240 Music - Sort Songs



SEARCH MUSIC

- 1. Tap \prod to access the lists of songs.
- 2. Tap on \square and enter the name of the song to search.

CREATE PLAYLIST

- 1. Tap 📑 to access Playlists.
- 2. Tap + to create a new playlist.

Playlists		►	FTP 🚬	*	(× O	10:07
	10	ŀ				
Recently add 4songs	Playlist Name					
New playlist Osong	My favourite					
	Cancel		ОК			

Figure 136: GXV3240 Music - Create Playlist

EDIT PLAYLIST

- 1. Tap 📑 to access Playlists.
- 2. Touch and press one of the playlist for about 3 seconds to select it.
- 3. Press (I) to bring up options to play the playlist or rename the playlist.
- 4. Tap $\overline{1}$ to delete the selected playlist.

Once the playlist is created, users can touch and press it for about 3 seconds



BROWSER

GXV3240 browser could be used in a similar way as a PC-based web browser, i.e., open web pages,

bookmarks, view history, search and etc. Tap on the phone's menu or desktop to launch the Browser application.



Figure 137: GXV3240 Web Browser

- Touch the screen and scroll up/down/left/right to view the web page.
- Double tap on the screen to zoom in/zoom out. Or use two fingers on the screen to pinch in or spreading out the page.
- Press the MENU button () to access more options including bookmarks, share the page and etc.



Browser		🕑 🌵 🗘 19:46
Gentisinan Products	Refresh	Search. Sa
		📑 🖬 🖬
	Bookmarks	4_HD_VF
	Save to bookmarks	I <mark>t IP Cameras</mark>
	Share page	hanging weather conditions and m
	Find on page	is can be coljusted from to best fit manitaring needs and civarious locations
Grandstream The new inhered, weather-proof GXV307	Request desktop site	Camera djust the camera lens to fit a wide

Figure 138: GXV3240 Browser Menu Options

• To open a new window, tap on icon on the upper right corner of the Browser. Then select to open the new window.

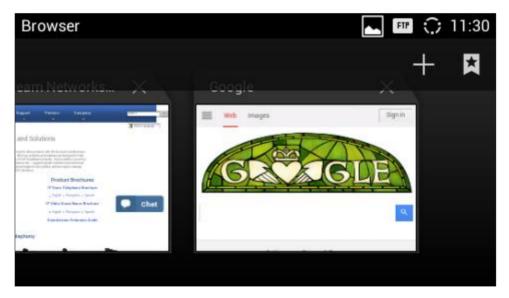


Figure 139: Open New Window in Browser

• To open **Bookmarks**, **History** and **Saved Pages**, tap the icon and then on the upper right of the Browser.



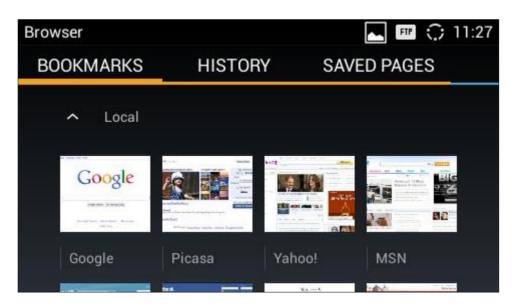


Figure 140: GXV3240 Web Browser-Bookmarks



This page intentionally left blank



RSS NEWS

ADD RSS WIDGET

- 1. On the GXV3240 idle screen, press Settings button (and select "Edit Widgets".
- 2. A list of widgets will show on the bottom of the screen. Swipe left/right to find the "RSS News" widget.
- 3. Touch and drag it to the idle screen. Please make sure there is enough space on the idle screen to place the widget.

USE RSS WIDGET

On the RSS widget, users can tap on icon icon to refresh the page, scroll up/down to view the abstract of the news, and tap on the news to access the detailed content.

		18:23
RSS News		X
Exclusive: Christie Says Style Didn't 'Inspire' Bridge Domestic NewsABC	Downloads FTP	
Introduction Domestic NewsBBC	▼ FTPSetver	A
Update time: 18:13	Caftera	
	JE- MAR	

Figure 141: GXV3240 RSS News

RSS WIDGET SETTINGS

On the RSS News widget, tap on 🗱 to access RSS News settings.

- **Update Interval:** Configure the interval to refresh the news. The valid range is from 10 minutes to 24 hours.
- **Page-turning Intervals:** Configure the page-turning speed on the widget when it displays different pages of news.
- Subscribe: Select the categories of the news you would like to display on the RSS News.
- **RSS Feed:** Tap on the URL field on the bottom of the screen and enter the link of a new RSS feed.

Then tap on icon with to add it to the category of the RSS feed.



Settings	🗛 🎟 🌵 🗘 18:23
Update Interval	30 Mins. 🔺
Page-turning Intervals	10 Secs. 🔺
Subscribe Domestic News	
RSS Feed	0
http://	•

Figure 142: GXV3240 RSS News Settings

WEATHER

GXV3240 has a built-in Weather widget that provides weather information includes humidity, wind direction, wind speed (mph) and temperature in unit as configured by the users.

ADD WEATHER WIDGET

- 1. On the GXV3240 idle screen, press Settings button (I) and select "Edit Widgets".
- 2. A list of widgets will show on the bottom of the screen. Swipe left/right to find the "Weather" widget.
- 3. Touch and drag it to the idle screen. Please make sure there is enough space on the idle screen to place the widget.

USE WEATHER WIDGET

On the Weather widget, tap on Control to refresh the weather information. Users can also tap on the widget to access the settings.





Figure 143: GXV3240 Weather

WEATHER SETTINGS

Tap on the weather widget to access settings. Users will see four softkeys on the bottom of the screen.



Figure 144: GXV3240 Weather Settings

- "Update": Tap to refresh the weather information.
- "Share": Tap to share the weather information with other users.
- "Add City": Tap to add city for the location you would like to check the weather.



• "Settings": Tap on configure temperature unit and update interval time.

Weather Forecast	🛌 🎟 🌵 🗘 19:19
Temperature Unit	°C
Update Settings	
Automatic Update	
Update Interval	1Hours 🔺

Figure 145: GXV3240 Weather Update Settings



BS-IM&P

GXV3240 supports BroadCloud Instant Message and Presence (IM&P) feature. This service is a multitenant Instant Message & Presence service based on the Extensible Messaging and Presence Protocol (XMPP) and works with any XMPP compatible client. Please refer to the following link for more details about how to use BroadCloud IM&P on the GXV3240:

http://www.grandstream.com/products/gxv_series/general/documents/gxv32xx_broadworks_imp_guide.p df



This page intentionally left blank



ACTIONURL

GXV3240 supports ActionURL module, and it is used to set the URL for various kinds of phone events on phone web GUI, and when the corresponding event occurs on the phone, phone will send the configured URL to SIP server. To use ActionURL module, users need to know the supported events in this module, and also added the dynamic variables of the supported events on phone web GUI. The dynamic variables of the supported event will be replaced by actual values of the phone, in order to notify the event to SIP server. Please refer to GXV3240 Administration Guide and ActionURL User Guide for the configuration details.



This page intentionally left blank



PNP

The GXV3240 has built in PNP (Plug and Play) application to mass provision for other Grandstream phone clients. The PNP feature is for other phones to be able to find the configuration path and download their configuration settings with little or no configurations from GXV3240. It gives the GXV3240 phone accessibility to many phones' settings and features that can be configured, making it unnecessary to configure these settings on other phones themselves.

SET UP PNP APPLICATION

It needs to configure the Account 1's setting properly before implementing the PNP feature on GXV3240.

- 1. Check the Account Active box for Account 1.
- 2. In Account 1's SIP setting page, cancel the Validate Incoming SIP Messages feature.
- 3. In Account 1's SIP setting page, set the SIP transport protocol to UDP.
- 4. In the Account 1's SIP setting page, do not use 5060 as the Local SIP Port. This setting will be overridden to 0 automatically when the PNP feature is enabled. The port number with 0 refers the port number will be random.

ENABLE PNP FEATURE

After the settings above, end users can enable the PNP feature for GXV3240. It can be enabled from the web page or from the LCD screen.

ENABLE FROM WEB PAGE

- 1. Log in the GXV3240 web page, browse to Maintenance \rightarrow Upgrade.
- 2. Check the Enable PNP Feature box.
- 3. In the PNP URL box, type the URL path for the saved configuration file with protocol identifier. For example, <u>http://192.168.1.200/config</u>. The protocol identifier can be selected from tftp, http, and https.
- 4. GXV3240 supports the built-in httpd server feature. End users can save the config file in the GXV3240 device and it can be set as a file server transport the files to other phone client. If end user needs this feature, the config file should be saved in the directory /Internal Storage/pnp. And the PNP URL should be point to the pnp directory. For instance, if a user wants to set his GXV3240 as a HTTP file server, whose IP address is 192.168.1.100, and the config file is saved in the directory /Local Storage/pnp, it needs to enter http://192.168.1.100/pnp If it needs to transport the file via HTTPS, it needs to set the Access Method to HTTPS under the page of Maintenance→Web/SSH Access.



5. Then save the setting and reboot the unit. If the Account 1's Local SIP port does not be set to 0, the phone system will pop up a prompt window and it writes "The local SIP port is 5060 in your account, save the operation will change the port to the random one, sure to change?" Click OK to change to port from 5060 to 0 by force.

ENABLE FROM LCD

1. On the LCD screen, tap the icon **pp** to enter the PNP application.

Γο

2. Tap the Setting icon at the upper right corner of the screen to enter the PNP-Settings page.

3. In the Settings page, switch the PNP feature on and switch the 3CX Auto Provision off. Type the URL to the Configuration file path in the correct format. If the GXV3240 needs to be set as a file server, it needs to load the configuration file to the directory /Local Storage/pnp via the Import local configuration file.

4. Save the setting and reboot the device.

PNP-Settings	土 🧐 🖩 🗘 20:32
Settings	
PNP Reboot to take effect	ON
3CX Auto Provision Reboot to take effect	OFF
Configuration file path http://192.168.1.100/pnp	
🗙 Cancel	✓ Save

Figure 146: GXV3240 PNP Settings



USE PNP FEATURE

After setting up the PNP feature on GXV3240, the other client phone units will multicast the SIP SUBSCRIBE message while booting up if the 3CX Auto Provision feature has been enabled. Then the client phone units' configure server path and transportation protocol will be provisioned by the SIP NOTIFY message from the GXV3240. Then the client phone units will download the config file from the provisioned URI.



This page intentionally left blank



CONNECT TO NETWORK AND DEVICES

The GXV3240 supports a variety of network connections (Ethernet, Wi-Fi) and device connections, including EHS headset, USB, SD card and Bluetooth device. Users can connect the GXV3240 to transfer files from/to the GXV3240 using a USB connection, SD card or Bluetooth.

ETHERNET

Ethernet connection is turned on as DHCP by default. If you would like to use Ethernet connection for network access, please make sure the Ethernet cable is plugged in to the LAN port on the back of the GXV3240.

To configure Ethernet settings on GXV3240 LCD:

- 1. Go to GXV3240's Settings application->Wireless & Network->Ethernet Settings.
- 2. Touch IPv4 settings.
- 3. Tap on "Address Type" to select DHCP, Static IP or PPPoE as the address type.
 - For DHCP, save the setting and the GXV3240 should be able to get IP address from the DHCP server in the network.
 - For static IP, enter IP Address, Subnet Mask, Default Gateway, DNS Server and Alternative DNS server for the GXV3240 to correctly connect to network.
 - For PPPoE, enter PPPoE account ID and password so the GXV3240 can get IP address from the PPPoE server.

WI-FI

WI-FI is supported and built-in on the GXV3240. GXV3240 can be connected to network if Wi-Fi is available within the area.

TURN ON/OFF WI-FI

- 1. Go to GXV3240's **Settings**.
- 2. Touch Wireless & Network.
- 3. Check or uncheck the option for **Wi-Fi**.

Or, users could open the top status bar->System Settings and tap on WI-FI icon 🔻 to turn it on/off.



ADD WI-FI NETWORKS

- 1. Once Wi-Fi is turned on, GXV3240 will automatically start the scanning within the range.
- 2. Go to GXV3240's Settings.
- 3. Touch Wireless & Network.
- 4. Touch Wi-Fi Settings.
- 5. A list of Wi-Fi networks will be displayed as scanning result. Tap on the SSID and enter the correct password information to connect to the selected Wi-Fi network.
- 6. The phone will start connecting to the Wi-Fi. The status bar will show Wi-Fi signal strength.
- 7. Once it's added and the password is remembered, the GXV3240 will connect to it again when the SSID is within the range.

Wi-Fi setting	S	FTP	🖌 🤿 18:11
AdminIT Secured with LA_EAP_TL Secured with LA_Guest Secured with	LA_Guest Excement Security WPA2 PSK Password		((ț ^a ((ț
LA_Lab Secured with			(î:
DSITIGER Secured with	Cancel	Connect	((;•

Figure 147: GXV3240 Connect to Wi-Fi

8. The previous steps allow the GXV3240 to connect the WiFi network with DHCP setting by default. If it needs to connected the WiFi with static IP or PPPoE setting, please scroll down the setting window and tap to check the "Show advanced options". Then the window will show up the IP settings at the bottom. If the Static is selected, the system will require end user to input IP address, Gateway, Network prefix length and DNS 1 and DNS 2 addresses. If the PPPoE is selected, the system will require end user to input PPPoE account ID and password.



Wi-Fi settings	s		FTP 奈 14:07
TP-LINK_52 Connected	TP-LINK_52024		() ()
LA_LAB_2.4 Secured with	Show advar	nced options	
AdminIT Secured with	IP settings		((î:
LA_Guest Secured with	Static		<u> </u>
DSITIGER Secured with	Cancel	Save	((;•

Figure 148: GXV3240 Connect to Wi-Fi Show Advanced Options

9. If there is a need to modify the saved WiFi network setting, the end user should tap and long press the SSID bar in the Wi-Fi setting page. The system will pop up a prompt and then user needs to tap the "Modify Network". Then the phone system will pop up a new window to allow user to check the current WiFi parameters and to change the setting by checking the "Show advanced options" at the bottom.

For more information about how to use Wi-Fi on the GXV3240, please refer to the link below: http://www.grandstream.com/products/gxv_series/gxv3240/documents/gxv3240_wifi_guide.pdf

BLUETOOTH

Bluetooth is a proprietary, open wireless technology standard for exchanging data over short distances from fixed and mobile devices, creating personal area networks with high levels of security. The GXV3240 supports Bluetooth Class 2, version 4.0 + EDR. Users could use Bluetooth to transfer files, share contact information with other Bluetooth portable devices, use Bluetooth headset for making calls, switch calls to the GXV3240 from mobile devices using Bluetooth hands-free profile, and listen to media (music or other audio output) from the GXV3240.

To connect to a Bluetooth device, turn on GXV3240's Bluetooth radio first. The first time when using a new Bluetooth device with the GXV3240, "pair" the device with GXV3240 so that both devices know how to connect securely to each other. After that, users could simply connect to a paired device. Turn off Bluetooth if it's not used.

Bluetooth related settings are under GXV3240's Settings-> Wireless & Network.



TURN ON/OFF BLUETOOTH

- 1. Go to GXV3240's Settings.
- 2. Touch Wireless & Network.
- 3. Check or uncheck the option for **Bluetooth**.

Or, users could open the top status bar->System Settings and tap on Bluetooth icon ²⁰ to turn it on/off.

CHANGE BLUETOOTH DEVICE NAME

The GXV3240 uses "GXV3240" as Bluetooth device name by default. The device name will be visible to other devices when connecting them. Follow the steps below to change the name:

- 1. Go to GXV3240's **Settings**.
- 2. Turn on **Bluetooth**.
- 3. Select Wireless & Network->Bluetooth settings.
- 4. Press Menu button and tap on "Rename phone".
- 5. Enter a name and tap on "Done".

PAIR GXV3240 WITH A BLUETOOTH DEVICE

Before connecting GXV3240 with other Bluetooth device, users must pair them first. They will stay paired afterwards unless they are unpaired.

- 1. Go to GXV3240's Settings.
- 2. Select Wireless & Network and turn on Bluetooth.
- 3. Tap on Bluetooth settings.
- 4. Tap on the Bluetooth device to make it visible to all nearly Bluetooth devices.
- 5. The GXV3240 scans and displays the IDs of all available Bluetooth devices in range. If the device you would like to pair with does not show up in the list, ensure that the other device is turned on and set to be discoverable.
- 6. If the GXV3240 stops scanning before the other device is ready, press Menu button and select "Search for devices".
- 7. Once the Bluetooth device shows up in the result, tap on it to start pairing. Confirm the passkey in the prompted message (if any). Or If passcode is required, please refer to the device's documentation or other procedures to obtain the passcode.



Bluetooth settings		FTP	*	\odot	18:44
¢	GXV3240 Only visible to paired devices				
Paireo	Idevices				
\bigcirc	JABRA EASYGO			-1-1	<u> -</u> -

Figure 149: GXV3240 Bluetooth - Paired Device

UNPAIR A BLUETOOTH DEVICE

- 1. In the Bluetooth settings, tap on the Bluetooth device.
- 2. Tap on **Unpair**.

For more information about Bluetooth feature on the GXV3240, please refer to the link below: http://www.grandstream.com/products/gxv_series/gxv3240/documents/gxv3240_bluetooth_guide.pdf

EHS HEADSET

The GXV3240 supports normal RJ9 headset and EHS headset. To use EHS headset:

- 1. Go to the GXV3240 web GUI->**Maintenance->Device Manager**: Headset Type. Select "Plantronics EHS" and reboot the phone to take effect.
- Connect EHS Headset to GXV3240. Insert headset connector into the RJ9 headset port on the back of GXV3240.
- 3. To switch to headset mode, press headset button not the GXV3240. A headset icon will show on the GXV3240 status bar. There are two different headset mode for users to select from web GUI-> Maintenance->Device Manager: Headset Key Mode. After selecting the desired mode, save the change and reboot the phone to take effect. Please go to http://www.grandstream.com/support and refer to "GXV3240 Administration Guide" for the key mode details.



This page intentionally left blank



USB

The GXV3240 supports USB connection with USB storage devices. To connect and access USB storage device:

- 1. Insert USB storage device into USB port at the back of the GXV3240.
- 2. It will take a few seconds for the GXV3240 to prepare the connection. Then the USB storage icon will show on the status bar.
- 3. To access USB storage, go to GXV3240 MENU->File Manager->USB Disk. Tap on it to access and manage your data.

SD CARD

- 1. Insert your SD card into SD Card slot at the back of GXV3240. Please make sure the SD Card is inserted with right direction on the GXV3240 as indicated on the SD card slot.
- 2. It will take a few seconds for the GXV3240 to prepare the connection. Then the SD Card icon ^{IIII} will show on the status bar.
- 3. To access SD Card, go to GXV3240 MENU->File Manager->sdcard. Tap on it to access and manage your data.

HDMI DEVICE

- 1. Plug one end of the mini HDMI cable into the mini HDMI port on the GXV3240.
- 2. Plug the other end of the mini HDMI cable into the HDMI port on the LCD display or TV. You might need adjust the resolution on the LCD display or TV for proper display.
- 3. On the GXV3240, go to **Settings->Display**. Make sure the HDMI is turned on. A HDMI icon will show

on the top status bar



Display	🎟 🎰 🕄 19:01	
Landscape screen Set all screens landscaped	OFF	
HDMI control	HDMI display synchronization	
HDMI output format	HDMI 1080P 60HZ 16:9	
HDMI color mode	YCBCR	
HDMI display settings		

Figure 150: Settings->Display->HDMI

4. In LCD Settings->Display, tap on "HDMI control", a window with selections will be shown on the screen. It allows end users to set the HDMI output mode from "Close HDMI output", "HDMI display synchronization with LCD", "and Show remote screen". If "Close HDMI output" is selected, the HDMI output feature will be turned off. If "HDMI display synchronization with LCD" is selected, the pictures displayed on the remote HDMI device will always be same as the GXV3240's LCD display. If "Show remote screen" is selected, the remote HDMI device will display the same picture with the phone's LCD screen unless displaying the remote side's video in full size mode during a video call.

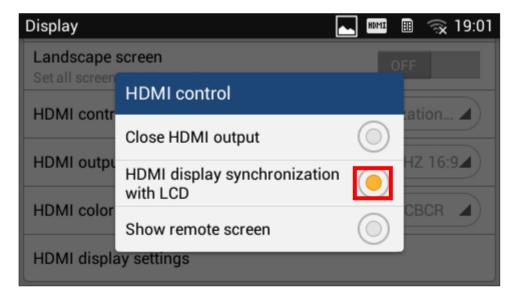


Figure 151: Settings->Display->HDMI Control



5. In LCD Settings->Display, tap on "HDMI output format", a window with selections will be shown on the screen. In this window, end user can set the HDMI output video quality, screen refresh rate and screen resolution for the GXV3240 device. The video quality can be selected from 480P to 720P; the screen refresh rate can be selected from 50HZ to 60HZ, and the screen resolution can be selected from 4:3 to 16:9.

Display			🗈 🥱 19:01
Landscape Set all screen	HDMI output format		F
HDMI contr	HDMI 720P 60HZ 16:9	\bigcirc	ation 🔺
HDMI outpu	HDMI 1080P 50HZ 16:9	\bigcirc	HZ 16:9▲
HDMI color	HDMI 1080P 60HZ 16:9	\bigcirc	CBCR
HDMI displa	Cancel		

Figure 152: Settings->Display->HDMI Output Format

6. In LCD Settings->Display, tap on "HDMI output format", a window with selections will be shown on the screen. User can select from RGB and YCbCr, the color spaces used to represents digital component video. The RGB represents color as red, green, and blue. The YCbCr represents color as brightness and two color difference signals.

Display		⊾ 🎟 🖩 🤿 19:01
Landscape		
Set all screen	HDMI color mode	
HDMI contr	RGB	
HDMI outpu	YCBCR	() HZ 16:9∡)
HDMI color	Cancel	CBCR 🔺
HDMI display settings		

Figure 153: Settings->Display->HDMI Color Mode



7. In LCD **Settings->Display**, tap on "HDMI Display Settings", an adjusting bar will show on the screen. Scroll to the left or right to adjust the display on the output TV or LCD screen. Once done, tap on OK.

Display			🎫 🗘 15:49
Screensaver Timeout Screensaver Timeout Settings		2 Mins.	
Daydream	HDMI display se	ttings	
Landscape : Set all screen		•	FF
HDMI	Cancel	ОК	ON
HDMI display settings			

Figure 154: Settings->Display->HDMI Display Settings

8. The end user can select the audio channel while the HDMI device is connected. In LCD **Settings->Sound**, there is an audio channel setting "HDMI". If it switched on, the audio channel will be use the HDMI device. Otherwise, the audio channel will be used locally.

ound	🚥 🗉 🙃 19:01
General	
Silent mode	OFF
HDMI	ON
Line order 3.5mm earphone line order setting.	CTIA
Volumes	
Incoming calls	
Ringtone	Flutey Phone 🔺
Notifications	

Figure 155: Settings->Display->HDMI Audio Channel Switch



EXPERIENCING THE GXV3240 APPLICATION PHONE

Please visit our website: <u>http://www.grandstream.com</u> to receive the most up- to-date updates on firmware releases, additional features, FAQs, documentation and news on new products.

We encourage you to browse our <u>product related documentation</u>, <u>FAQs</u> and <u>User and Developer Forum</u> for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all of your questions. Contact a technical support member or <u>submit a trouble ticket online</u> to receive in-depth support.

Thank you again for purchasing Grandstream Enterprise Application phone, it will be sure to bring convenience and color to both your business and personal life.

* Android is a trademark of Google Inc.

* Skype and Lync are Registered Trademarks of Microsoft Corporation.



HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.